

# How to connect on Smartlogger3000 using WAN and LAN port



**Huawei Technologies Co. Ltd.**

Version	Created by	Date	Remarks
01	Huawei r84116102	31.12.2020	Smartlogger3000

The information in this document may contain predictive statements including, without limitation, statements regarding the future financial and operating results, future product portfolio, new technology, etc. There are a number of factors that could cause actual results and developments to differ materially from those expressed or implied in the predictive statements. Therefore, such information is provided for reference purpose only and constitutes neither an offer nor an acceptance. Huawei may change the information at any time without notice.

This document describes the usage of LAN and WAN port.


In order to connect the Smart Logger to the router and to the computer in the same time, Smart Logger 3000 came with two different Ethernet Ports: LAN and WAN.

**Procedure:**

Connected Port	Item	SmartLogger Default Value	Example PC Setting
LAN port	IP address	192.168.8.10	192.168.8.11
	Subnet mask	255.255.255.0	255.255.255.0
	Default gateway	192.168.8.1	192.168.8.1
WAN port	IP address	192.168.0.10	192.168.0.11
	Subnet mask	255.255.255.0	255.255.255.0
	Default gateway	192.168.0.1	192.168.0.1

**Recommendation:**

- **Connect the cable between computer and Smart Logger on LAN port;**
- **Connect the cable between router (modem) and Smart Logger on WAN port;**

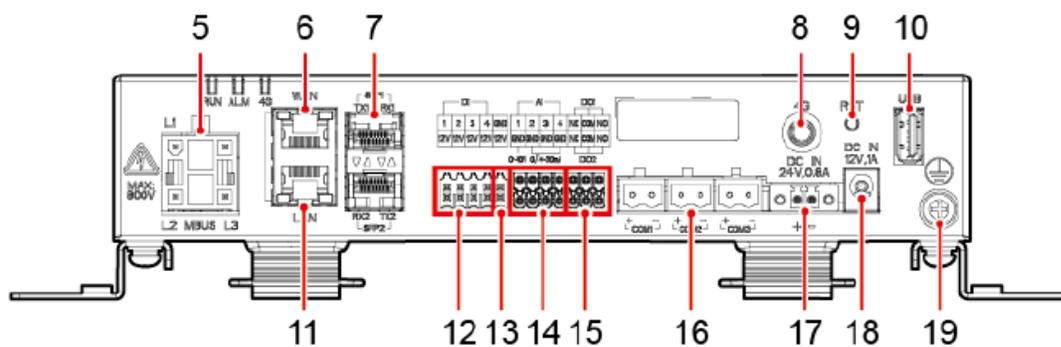


IL04W00003

(6) GE port (WAN) (11) GE port (LAN)

### A. LAN port usage

#### Step 1

Connect the Ethernet cable in the LAN port for accessing with PC Smart Logger interface.

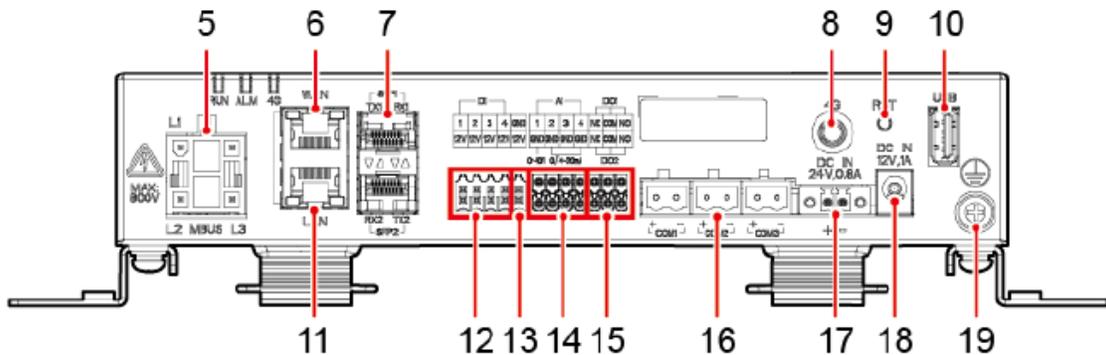

IL04W00003

(6) GE port (WAN) (11) GE port (LAN)

#### Step 2 – PC settings


Connected Port	Item	SmartLogger Default Value	Example PC Setting
LAN port	IP address	192.168.8.10	192.168.8.11
	Subnet mask	255.255.255.0	255.255.255.0
	Default gateway	192.168.8.1	192.168.8.1
WAN port	IP address	192.168.0.10	192.168.0.11
	Subnet mask	255.255.255.0	255.255.255.0
	Default gateway	192.168.0.1	192.168.0.1

Because the LAN port has the IP address **192.168.8.10** the settings of the PC for the segment where the Smart Logger is connected should be the same.

Go to Windows start->Control Panel->Network and Internet->Network and Sharing Center->Change adapter settings->Double click on Local Area Connection->Double click on Internet Protocol Version 4 and set the IP like following:

**IP address: 192.168.8.11**

**Subnet mask: 255.255.255.0**

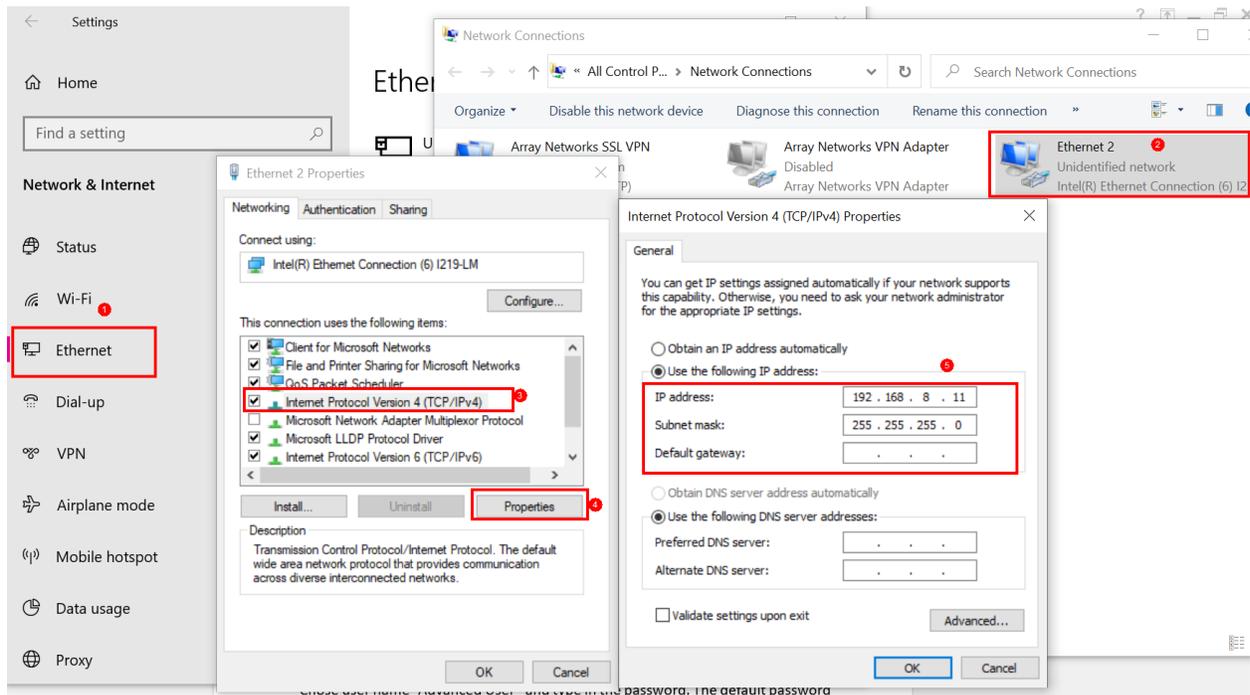


### Step 3 - Connect to the Smartlogger3000 WebUI interface

Open a browser (Chrome 50 or IE11) and type the next link: <https://192.168.8.10> Chose user name “Admin” and type in the password. The default password is “Changeme”.

If the message appear before connect like below: for IE select “Continue to this website (not recommended) and for Chrome select “Hide advanced” and Proceed to 192.168.0.10(unsafe).

## Internet Explorer:

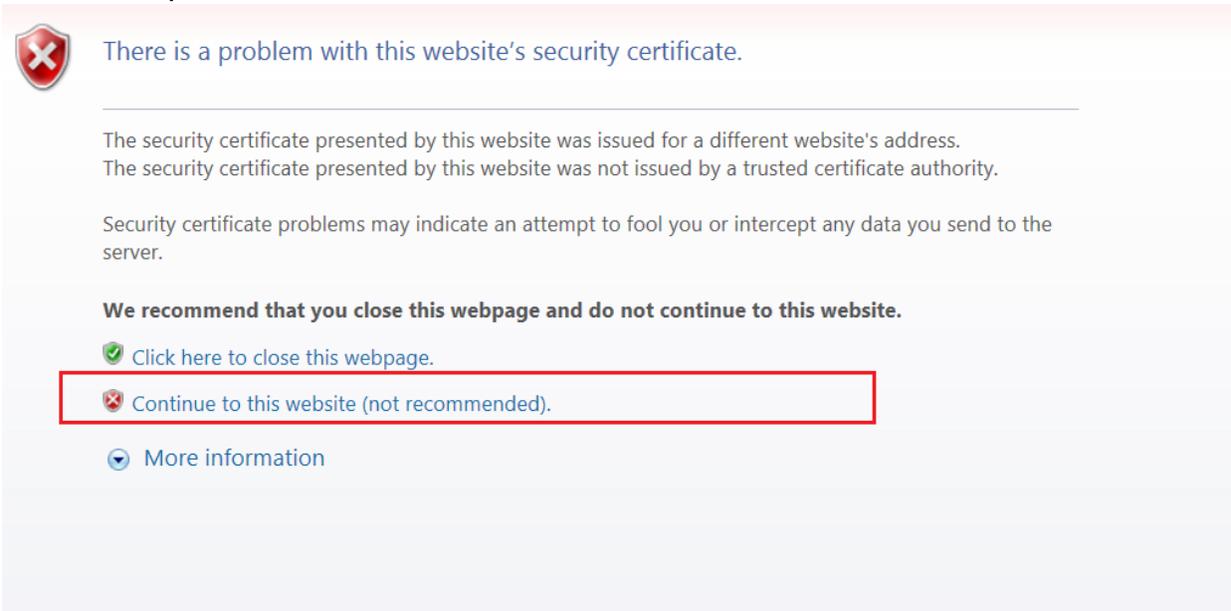

 There is a problem with this website's security certificate.

---


The security certificate presented by this website was issued for a different website's address.  
The security certificate presented by this website was not issued by a trusted certificate authority.

Security certificate problems may indicate an attempt to fool you or intercept any data you send to the server.

**We recommend that you close this webpage and do not continue to this website.**

-  [Click here to close this webpage.](#)
-  [Continue to this website \(not recommended\).](#)
-  [More information](#)

## Chrome:

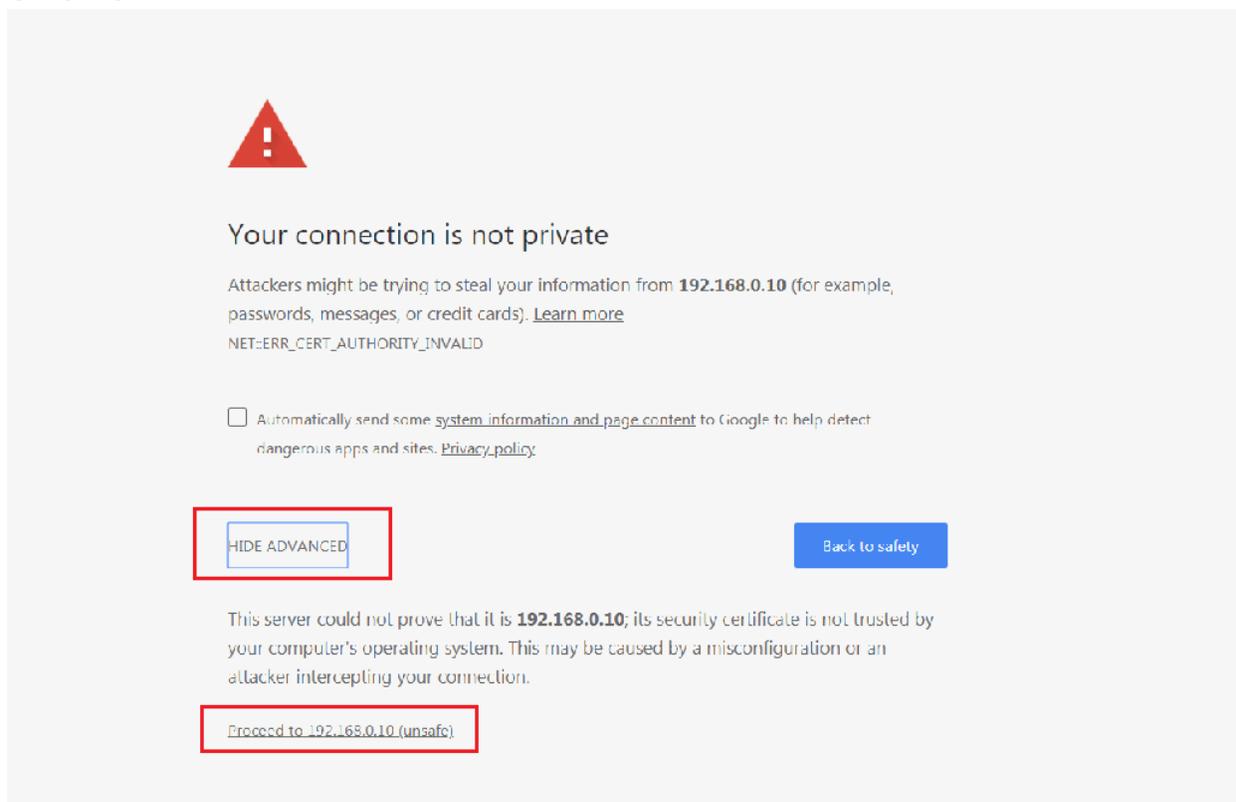



### Your connection is not private

Attackers might be trying to steal your information from **192.168.0.10** (for example, passwords, messages, or credit cards). [Learn more](#)  
NET:ERR\_CERT\_AUTHORITY\_INVALID


Automatically send some [system information and page content](#) to Google to help detect dangerous apps and sites. [Privacy policy](#)

[HIDE ADVANCED](#) [Back to safety](#)

This server could not prove that it is **192.168.0.10**; its security certificate is not trusted by your computer's operating system. This may be caused by a misconfiguration or an attacker intercepting your connection.

[Proceed to 192.168.0.10 \(unsafe\)](#)

Login:

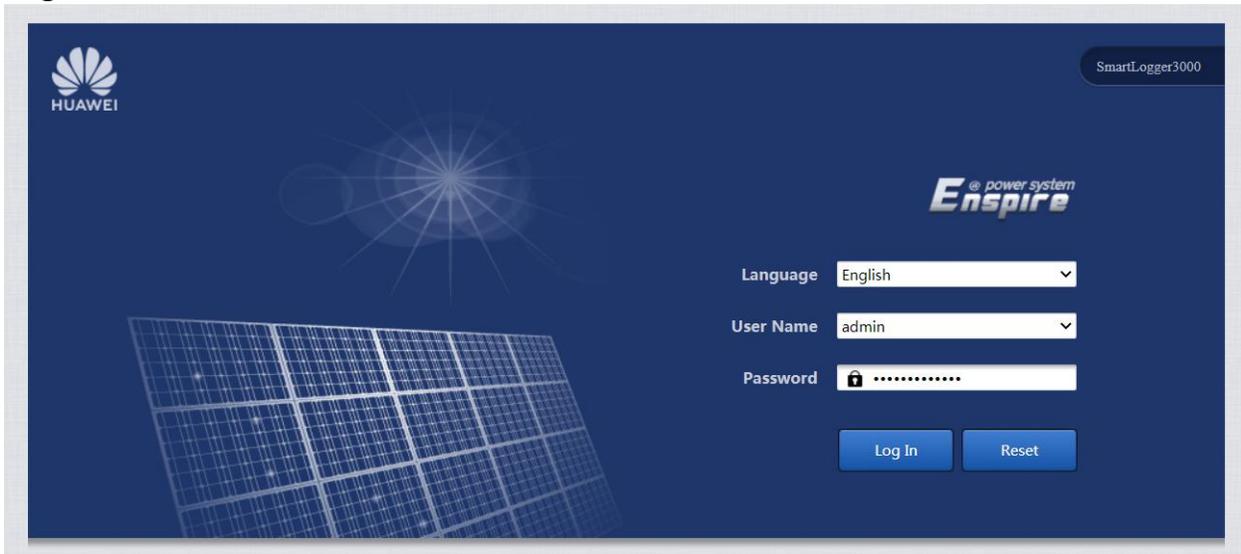

### B. WAN Port Usage

The Ethernet cable between the router and Smart Logger should be connected on WAN port.

The wired network IP is referring to the WAN port network.


Set the Default gateway to the same IP address with the router.

Change the WAN IP address from the fault 192.168.0.10 to be in the same range with default gateway IP.

E.g:

**If Default Gateway: 192.168.1.26**

**Then IP address: 192.168.1.10**

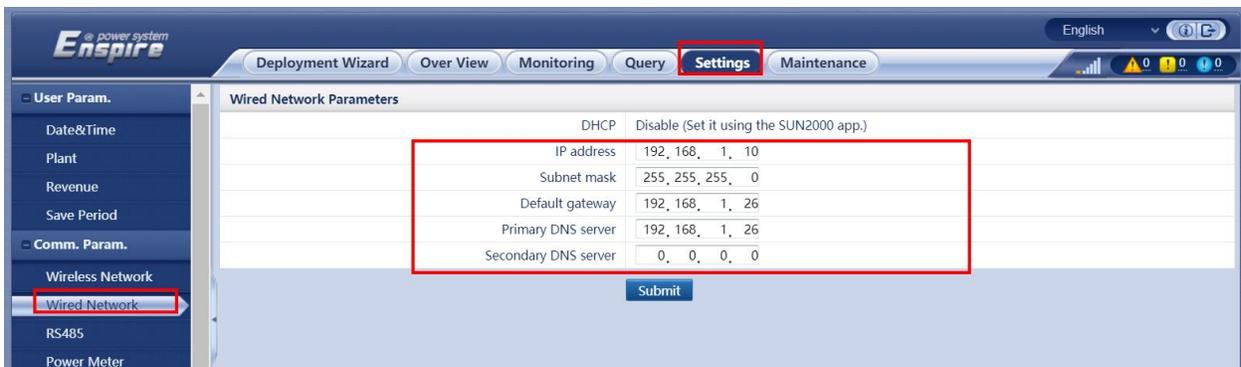

**Submit**



**Huawei Enterprise Technical Assistant Center will assist you 24x7**

**E-mail:** [eu\\_inverter\\_support@huawei.com](mailto:eu_inverter_support@huawei.com)