

**SUN2000MB
V200R023C10SPC209**

Modbus Interface Definitions

Issue 04
Date 2025-04-09



Copyright © Huawei Digital Power Technologies Co., Ltd. 2025. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Digital Power Technologies Co., Ltd.

Trademarks and Permissions



HUAWEI and other Huawei trademarks are the property of Huawei Technologies Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between Huawei Digital Power Technologies Co., Ltd. and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied. The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

Huawei Digital Power Technologies Co., Ltd.

Address: Huawei Digital Power Antuoshan Headquarters

Futian, Shenzhen 518043

People's Republic of China

Website: <https://digitalpower.huawei.com>

Contents

1 Change History..... 1

2 Supported Models..... 2

2.1 Model Description..... 2

3 Overview..... 4

3.1 Terms and Abbreviations..... 4

4 Register Definitions..... 6

4.1 Inverter Equipment Register..... 6

4.2 Battery Equipment Register..... 66

5 Customized Interfaces..... 142

5.1 Obtaining the System Information of Optimizers..... 142

5.2 Obtaining Real-time Data of Optimizers..... 144

6 Interface Instructions..... 148

6.1 Alarm Information..... 148

6.2 Power Grid Scheduling..... 151

6.2.1 cosφ-P/Pn Characteristic Curve..... 151

6.2.2 Q-U Characteristic Curve..... 152

6.2.3 PF-U Characteristic Curve..... 153

6.3 Grid Codes..... 154

6.4 Energy Storage Specifications..... 169

7 Overview of the Communications Protocol..... 172

7.1 Physical Layer..... 172

7.2 Data Link Layer..... 172

7.2.1 Modbus-RTU..... 172

7.2.1.1 ADU Length..... 173

7.2.1.2 Communications Address..... 173

7.2.1.3 CRC..... 173

7.2.2 Modbus-TCP..... 174

7.2.2.1 ADU Length..... 174

7.2.2.2 MBAP Packet Header..... 174

7.2.2.3 Communications Address..... 175

7.2.2.4 TCP Port..... 176

7.2.2.5 TCP Link Establishment Process.....	176
7.3 Application Layer.....	177
7.3.1 Function Code List.....	177
7.3.2 Exception Code List.....	177
7.3.3 Reading Registers (0x03).....	179
7.3.3.1 Frame Format of a Request from a Master Node.....	179
7.3.3.2 Frame Format of a Normal Response from a Slave Node.....	179
7.3.3.3 Frame Format of an Abnormal Response from a Slave Node.....	179
7.3.3.4 Examples.....	179
7.3.4 Writing a Single Register (0x06).....	181
7.3.4.1 Frame Format of a Request from a Master Node.....	181
7.3.4.2 Frame Format of a Normal Response from a Slave Node.....	181
7.3.4.3 Frame Format of an Abnormal Response from a Slave Node.....	181
7.3.4.4 Examples.....	182
7.3.5 Writing Multiple Registers (0x10).....	183
7.3.5.1 Frame Format of a Request from a Master Node.....	183
7.3.5.2 Frame Format of a Normal Response from a Slave Node.....	184
7.3.5.3 Frame Format of an Abnormal Response from a Slave Node.....	184
7.3.5.4 Examples.....	184
7.3.6 Reading Device Identifiers (0x2B).....	186
7.3.6.1 Command for Querying Device Identifiers.....	187
7.3.6.2 Command for Querying a Device List.....	188
7.3.6.3 Device Description Definition.....	189
7.3.7 Huawei-defined Functions (0x41).....	190
7.3.7.1 Uploading Files.....	190
7.3.7.1.1 Starting the Upload.....	191
7.3.7.1.2 Uploading Data.....	192
7.3.7.1.3 Completing the Data Upload.....	193
7.3.7.1.4 Timeout Processing.....	194
8 Reference Document.....	195

1 Change History

Issue	Date	Description
01	2023-09-13	This issue is the first official release.
02	2024-02-01	Specification Document Description.
03	2024-07-15	Some grid codes and model are added in this issue.
04	2024-12-27	The register of the energy storage device is added.

2 Supported Models

2.1 Model Description

Table 2-1 Supported models and firmware versions

Model	Model ID	Earliest Firm Version
SUN2000-12KTL-M5	473	V200R022C10
SUN2000-15KTL-M5	474	V200R022C10
SUN2000-17KTL-M5	475	V200R022C10
SUN2000-20KTL-M5	476	V200R022C10
SUN2000-25KTL-M5	477	V200R022C10
SUN2000-15KTL-ZHM5	478	V200R022C10
SUN2000-17KTL-ZHM5	479	V200R022C10
SUN2000-20KTL-ZHM5	480	V200R022C10
SUN2000-25KTL-ZHM5	481	V200R022C10
SUN2000-15K-MB0-ZH	492	V200R023C10PSC110
SUN2000-17K-MB0-ZH	493	V200R023C10PSC110
SUN2000-20K-MB0-ZH	494	V200R023C10PSC110
SUN2000-25K-MB0-ZH	495	V200R023C10PSC110
SUN2000-12K-MB0	487	V200R023C10PSC110
SUN2000-15K-MB0	488	V200R023C10PSC110
SUN2000-17K-MB0	489	V200R023C10PSC110
SUN2000-20K-MB0	490	V200R023C10PSC110

Model	Model ID	Earliest Firm Version
SUN2000-25K-MB0	491	V200R023C10PSC110
SUN5000-17K-MB0	497	V200R023C10SPC204
SUN5000-25K-MB0	498	V200R023C10SPC204
SUN2000-6K-MBL0	700	V200R023C10SPC204
SUN2000-10K-MBL0	701	V200R023C10SPC204
SUN2000-15K-MBL0	702	V200R023C10SPC204

The maximum active power ($P_{\max}$), maximum reactive power ($Q_{\max}$), and rated power (P_n) corresponding to each model can be obtained from the register interface. The model ID is the unique code of the model.

3 Overview

3.1 Terms and Abbreviations

Table 3-1 Terms and abbreviations

Name	Description
Master node	During master-slave communication, the party that initiates a communication request is referred to as the master node.
Slave node	During master-slave communication, the party that responds to a communication request is referred to as the slave node.
Broadcast address	Fixed to 0.
Register address	A register address is recorded in two bytes.
U16	Unsigned integer (16 bits)
U32	Unsigned integer (32 bits)
I16	Signed integer (16 bits)
I32	Signed integer (32 bits)
STR	Character string
MLD	Multiple bytes
Bitfield16	16-bit data expressed by bit
Bitfield32	32-bit data expressed by bit
N/A	Not applicable
s	Second

Name	Description
Epoch seconds	The number of seconds that have elapsed since 1970-01-01 00:00:00
RO	Data that is readable only
RW	Data that is readable and writable
WO	Data that is writable only

4 Register Definitions

4.1 Inverter Equipment Register

No.	Signal name	Read and write	Type	Unit	Gain	Address	Number of Reg	Scope
1	Model	RO	STR			30000	15	Nameplate name of the machine, original "model name"
2	SN	RO	STR			30015	10	Device SN, which is obtained from the electronic label of the entire system.
3	PN	RO	STR			30025	10	Product Code
4	Firmware Version	RO	STR			30035	15	Character string reporting: initial version VX00R00X (default VR version) VX00R00XD01, VX00R00XD02... (D0X is provided by the test and certification personnel.) Different country codes may be displayed differently.

5	Software version	RO	STR			30050	15	In V800R021C10SPCXX X, the offering name and software version are displayed on the display page.
6	Protocol version [Modbus]	RO	U32			30068	2	high-character: main version; Upgrade on Incompatible Changes low-letter: revision; Compatible upgrade The baseline version is D8.0. 0x00080000
7	Model ID	RO	U16			30070	1	Model ID. For details, see the Inverter Model Definition.xlsm.
8	Number of PV strings	RO	U16		1	30071	1	
9	Number of MPPTs	RO	U16		1	30072	1	
10	Rated power	RO	U32	kW	1000	30073	2	Pn
11	Maximum active power (Pmax)	RO	U32	kW	1000	30075	2	Read-only interface to 42027
12	Maximum apparent (Smax)	RO	U32	kV A	1000	30077	2	Read-only interface to 42025

13	Real-time maximum reactive power (Q _{max} , fed to the power grid)	RO	I32	kV ar	1000	30079	2	Reported to the monitoring, indicating the reactive power adjustment range. Feature data is updated when the power grid standard code and derating change except for model differences.
14	Real-time maximum reactive power (-Q _{max} , absorbed from the power grid)	RO	I32	kV ar	1000	30081	2	Reported to the monitoring, indicating the reactive power adjustment range. Feature data is updated when the power grid standard code and derating change except for model differences.
15	Maximum active power (P _{max_real})	RO	U32	kW	1000	30083	2	The default maximum active power capacity is fixed on the nameplate of the machine, and the maximum active power capacity will not change for one machine. as a set upper limit for the reference range (42027); The relationship is as follows: $0 < P_{max} \leq S_{max} \leq P_{max_real} \leq S_{max_real}$ Or the $0 < P_{max} \leq P_{max_real} \leq S_{max} \leq S_{max_real}$

16	Maximum apparent capacity (Smax_real)	RO	U32	kVA	1000	30085	2	The default apparent maximum capacity value is fixed on the machine nameplate, and one machine will not change. as a set upper limit for the reference range (42025); The relationship is as follows: $0 < P_{max} \leq S_{max} \leq P_{max_real} \leq S_{max_real}$ Or the $0 < P_{max} \leq P_{max_real} \leq S_{max} \leq S_{max_real}$
17	Product sales area	RO	STR			30105	2	XX: Two uppercase letters, indicating the sales area or application area of the product, mainly related to the AC power system. CN: Chinese mainland; EU: Europe; JP: Japan; US: North America (US/Canada/and regions with the same grid or certification requirements as the US); UK: United Kingdom; Default value: CN/EU: All areas where CE certification requirements are applicable. Huawei FusionSolar Smart PV Solution and Product Naming Specifications

18	Product software ID	RO	U16			30107	1	Unique ID of the software publishing entity. Used for processing the compatibility of the power grid standard code.
19	Product Software Version Number	RO	U16			30108	1	Software release entity specific release version sequence number Used to process the compatibility of the power grid standard code.
20	Power Grid Standard Code Protocol Version	RO	U16			30109	1	Protocol loading and verification is similar to CAN1.0 and CAN2.0.
21	Unique ID of the software.	RO	U16			30110	1	Unique ID of a software version. Upgrade packages with different IDs cannot be upgraded to each other. (Broadcast Upgrade Signature)
22	Number of upgrade packages	RO	U16		1	30111	1	The number of upgrade packages must be sufficient because more and more devices need to be upgraded.
23	Information about subpackage 1	RO	U32			30112	2	high-character: file type ID; Low character: device type ID.
24	Subpackage 2 information	RO	U32			30114	2	high-character: file type ID; Low character: device type ID.

25	Information about subpackage 3	RO	U3 2			30116	2	high-character: file type ID; Low character: device type ID.
26	Subpackage 4 information	RO	U3 2			30118	2	high-character: file type ID; Low character: device type ID.
27	Subpackage 5 information	RO	U3 2			30120	2	high-character: file type ID; Low character: device type ID.
28	Information about subpackage 6	RO	U3 2			30122	2	high-character: file type ID; Low character: device type ID.
29	Subpackage 7 information	RO	U3 2			30124	2	high-character: file type ID; Low character: device type ID.
30	Subpackage 8 information	RO	U3 2			30126	2	high-character: file type ID; Low character: device type ID.
31	Subpackage 9 information	RO	U3 2			30128	2	high-character: file type ID; Low character: device type ID.
32	Information about subpackage 10	RO	U3 2			30130	2	high-character: file type ID; Low character: device type ID.
33	[Third-party labeling] SN	RO	ST R			30191	10	Serial number of third-party OEM equipment, customized by third-party manufacturers
34	[Third-party label] Manufacturer model	RO	U1 6			30201	1	Model of third-party OEM equipment manufacturer

35	Subdevice Support ID	RO	Bitfield32			30207	2	
36	Subdevice presence flag.	RO	Bitfield32			30209	2	
37	Hardware version	RO	STR		1	31000	15	
38	Monitoring Board SN	RO	STR			31015	10	From the electronic label of the monitoring board
39	Monitoring software version	RO	STR			31025	15	MCU1 version
40	Main DSP version	RO	STR			31040	15	MCU2 version
41	CPLD version number	RO	STR			31070	15	MCU4 version
42	AFCl version number	RO	STR			31085	15	MCU5 version
43	Registration code	RO	STR		1	31200	10	
44	[Remote communication] Single-node remote communication	RO	Bitfield16			32000	1	Reported by IEC104, which indicates the merged PCS running status.

45	[Remote signal] Running status (monitoring)	RO	Bitfield16			32002	1	
46	[Remote signal] Running status (power processing)	RO	Bitfield32		1	32003	2	
47	[Remote signal] Alarm 1	RO	Bitfield16			32008	1	For details, see the Alarm Mapping sheet.
48	[Remote signal] Alarm 2	RO	Bitfield16			32009	1	For details, see the Alarm Mapping sheet.
49	[Remote signal] Alarm 3	RO	Bitfield16			32010	1	For details, see the Alarm Mapping sheet.
50	Device SN feature code	RO	U16			32015	1	Indicates the CRC16 value of the SN, which is the key data ID. Used to prevent incorrect energy yield from being modified due to incorrect energy yield reported by devices with the same address. The SN CRC is added to ensure that the energy yield source is correct.

51	PV1 voltage	RO	I16	V	10	32016	1	When bit 9 of power parameter mask 14 is 0, the signal name is PV1 voltage. When bit 9 of the power parameter mask 14 is 1, the processing logic is as follows: When DC Input Display Mode 30205 is set to 0, the signal name is PV1 Voltage. When DC input 30205 is set to 1, the signal name is MPPT1 Voltage.
52	PV1 current	RO	I16	A	100	32017	1	When bit 9 of power parameter mask 14 is 0, the signal name is PV1 current. When bit 9 of power parameter mask 14 is 1, the following logic is used: When DC input display mode 30205 is set to 0, the signal name is PV1 current. When DC Input Display Mode 30205 is set to 1, the signal name is MPPT1 Current.

53	PV2 Voltage	RO	I16	V	10	32018	1	When bit 9 of power parameter mask 14 is 0, the signal name is PV2 voltage. When bit 9 of the power parameter mask 14 is 1, the processing logic is as follows: When DC Input Display Mode 30205 is set to 0, the signal name is PV2 Voltage. When DC input 30205 is set to 1, the signal name is MPPT2 Voltage.
54	PV2 current	RO	I16	A	100	32019	1	When bit 9 of power parameter mask 14 is 0, the signal name is PV2 current. When bit 9 of the power parameter mask 14 is 1, the following logic is used: When DC Input Display Mode 30205 is set to 0, the signal name is PV2 Current. When DC input display mode 30205 is set to 1, the signal name is MPPT2 current.
55	PV3 Voltage	RO	I16	V	10	32020	1	
56	PV3 current	RO	I16	A	100	32021	1	
57	PV4 Voltage	RO	I16	V	10	32022	1	
58	PV4 current	RO	I16	A	100	32023	1	
59	PV5 voltage	RO	I16	V	10	32024	1	

60	PV5 current	RO	I16	A	100	32025	1	
61	PV6 voltage	RO	I16	V	10	32026	1	
62	PV6 current	RO	I16	A	100	32027	1	
63	DC power	RO	I32	kW	1000	32064	2	
64	Power grid line A and B voltage	RO	U16	V	10	32066	1	When the output mode is L/N, the signal name is Grid Voltage. When Output Mode is set to L1/L2/N or L1/L2, the signal name is UW Grid Voltage.
65	Power grid B/C line voltage	RO	U16	V	10	32067	1	This parameter is invalid when the output mode is L/N, L1/L2/N, or L1/L2.
66	Power grid CA line voltage	RO	U16	V	10	32068	1	This parameter is invalid when the output mode is L/N, L1/L2/N, or L1/L2.
67	Power grid phase A voltage	RO	U16	V	10	32069	1	This parameter is invalid when the output mode is L/N. When Output Mode is set to L1/L2/N or L1/L2, the signal name is UO Grid Voltage. Not displayed in off-grid mode
68	Power grid phase B voltage	RO	U16	V	10	32070	1	This parameter is invalid when the output mode is L/N. When Output Mode is set to L1/L2/N or L1/L2, the signal name is WO Grid Voltage. Not displayed in off-grid mode

69	Power grid phase C voltage	RO	U16	V	10	32071	1	This parameter is invalid when the output mode is L/N, L1/L2/N, or L1/L2.
70	Power grid phase A current	RO	I32	A	1000	32072	2	When the output mode is L/N, L1/L2/N, or L1/L2, the signal name is Grid Current.
71	Power grid phase B current	RO	I32	A	1000	32074	2	This parameter is invalid when the output mode is L/N, L1/L2/N, or L1/L2.
72	Power grid phase C current	RO	I32	A	1000	32076	2	This parameter is invalid when the output mode is L/N, L1/L2/N, or L1/L2.
73	Peak active power of the current day	RO	I32	kW	1000	32078	2	
74	Active power	RO	I32	kW	1000	32080	2	
75	reactive power	RO	I32	kV ar	1000	32082	2	
76	Power factor	RO	I16		1000	32084	1	
77	Grid frequency	RO	U16	Hz	100	32085	1	
78	Inverter efficiency	RO	U16	%	100	32086	1	When PCS is used to generate power, it indicates the power generation efficiency. When PCS is used to absorb, it indicates the absorption efficiency.
79	Internal temperature	RO	I16	°C	10	32087	1	

80	Insulation impedance	RO	U16	MΩ	1000	32088	1	
81	Device Status	RO	E16			32089	1	
82	Fault Code	RO	U16			32090	1	Fault code corresponding to the alarm with the highest priority. For details, see the Alarm Description sheet.
83	Start-up time	RO	Epoch Second	s	1	32091	2	Monitoring Calculation
84	Shutdown time	RO	Epoch Second	s	1	32093	2	Monitoring Calculation
85	Accumulated power generation	RO	U32	kWh	100	32106	2	
86	Total DC Input Power	RO	U32	kWh	100	32108	2	
87	Statistical time of the current energy yield.	RO	Epoch Second	s	1	32110	2	
88	Current Hour Electricity	RO	U32	kWh	100	32112	2	

89	Current-day power generation	RO	U32	kWh	100	32114	2	
90	Electricity generated in the current month	RO	U32	kWh	100	32116	2	
91	Electricity generated in the current year	RO	U32	kWh	100	32118	2	
92	Number of critical alarms	RO	U16		1	32151	1	
93	Number of major alarms	RO	U16		1	32152	1	
94	Number of Minor Alarms	RO	U16		1	32153	1	
95	Number of Warning Alarms	RO	U16		1	32154	1	
96	Alarm clearance SN	RO	U16			32155	1	After the alarm is cleared, the serial number increases by 1. After the alarm is reversed, the serial number starts from 1 and skips 0.

97	Last Hour Power Statistics Time	RO	Epoch Second	s	1	32156	2	include generate/absorbed power
98	Electricity generated in the previous hour	RO	U32	kWh	100	32158	2	
99	Electricity statistics time of the previous day	RO	Epoch Second	s	1	32160	2	include generate/absorbed power
100	Electricity generated in the previous day	RO	U32	kWh	100	32162	2	
101	Statistical time of the previous month.	RO	Epoch Second	s	1	32164	2	include generate/absorbed power
102	Electricity generated in the previous month	RO	U32	kWh	100	32166	2	
103	Electricity statistics time of the previous year	RO	Epoch Second	s	1	32168	2	include generate/absorbed power

104	Electricity generated in the previous year	RO	U32	kWh	100	32170	2	
105	Serial number of the latest active alarm.	RO	U32			32172	2	When a new active alarm is generated, the serial number increases by 1.
106	Latest Historical Alarm Serial Number	RO	U32			32174	2	When an active alarm is transferred to the historical alarm, the serial number of the historical alarm is the same as the serial number of the last active alarm transferred to the historical alarm.
107	Total bus voltage	RO	I16	V	10	32176	1	Data reported by PID, used in single-level scenarios
108	Maximum PV voltage	RO	I16	V	10	32177	1	Data reported by PID, used in single-level scenarios
109	Minimum PV voltage	RO	I16	V	10	32178	1	Data reported by PID, used in single-level scenarios
110	Average PV negative-to-ground voltage	RO	I16	V	10	32179	1	Data reported by PID, used in single-level scenarios
111	Maximum PV positive-to-ground voltage	RO	I16	V	10	32180	1	Data reported by PID, used in single-level scenarios

112	Minimum PV negative-to-ground voltage	RO	I16	V	10	32181	1	Data reported by PID, used in single-level scenarios
113	Inverter-to-PE withstand voltage	RO	U16	V	1	32182	1	Data reported by PID, used in single-level scenarios To be compatible with PID 2.0, the PCS reports 1502. 0:100 V or 1100 V inverter; 1500: HAV1 inverter; 1502: HAV2 inverter;
114	ISO feature information	RO	Bitfield16		1	32183	1	Data reported by PID, used in single-level scenarios
115	Built-in PID running status	RO	E16			32190	1	
116	PV negative-to-ground voltage	RO	I16	V	10	32191	1	
117	Direction of the built-in PID compensation	RO	E16			32192	1	
118	Total DC energy yield of MPPT1	RO	U32	kWh	100	32212	2	TD Tech NMS GUI Display [5/4]
119	Total DC energy yield of MPPT2	RO	U32	kWh	100	32214	2	TD Tech NMS GUI Display [5/4]

120	MPPT3 DC Total Energy Yield	RO	U32	kWh	100	32216	2	TD Tech NMS GUI Display [5/4]
121	MPPT4 DC Accumulated Energy Yield	RO	U32	kWh	100	32218	2	TD Tech NMS GUI Display [5/4]
122	Monitoring alarm 1	RO	Bitfield16			32252	1	GroupID:0xFF00
123	Monitoring alarm 2	RO	Bitfield16			32253	1	GroupID:0xFF01
124	Monitoring alarm 3	RO	Bitfield16			32254	1	GroupID:0xFF02
125	[External] Power alarm 1	RO	Bitfield16			32255	1	GroupID:0x0000
126	[External] Power alarm 2	RO	Bitfield16			32256	1	GroupID:0x0001
127	[External] Power alarm 3	RO	Bitfield16			32257	1	GroupID:0x0002
128	[External] Power alarm 4	RO	Bitfield16			32258	1	GroupID:0x0003
129	[External] Power alarm 5	RO	Bitfield16			32259	1	GroupID:0x0004

130	[External] Power alarm 6	RO	Bitfield16			32260	1	GroupID:0x0005
131	[External] Power alarm 7	RO	Bitfield16			32261	1	GroupID:0x0006
132	[External] Power alarm 8	RO	Bitfield16			32262	1	GroupID:0x0007
133	[External] Power alarm 9	RO	Bitfield16			32263	1	GroupID:0x0008
134	[External] Power alarm 10	RO	Bitfield16			32264	1	GroupID:0x0009
135	[External] Power alarm 11	RO	Bitfield16			32265	1	GroupID:0x000A
136	[External] Power alarm 12	RO	Bitfield16			32266	1	GroupID:0x000B
137	[External] Power alarm 13	RO	Bitfield16			32267	1	GroupID:0x000C
138	Internal PID alarm	RO	Bitfield16			32268	1	GroupID:0x000D
139	[External] Power alarm 15	RO	Bitfield16			32269	1	GroupID:0x000E

140	Monitor alarm 4	RO	Bitfield16			32271	1	GroupID:0xFF03
141	Monitor alarm 5	RO	Bitfield16			32272	1	GroupID:0xFF04
142	Monitor alarm 6	RO	Bitfield16			32274	1	GroupID:0x0010
143	Stent System Status	RO	Bitfield32			34000	2	BIT0–BIT15: state of support system 1–16; BIT16–BIT31: reserved for future expansion.
144	Running time of capacitor bank	RO	U32	hour	10	35000	2	Used to inspect data.
145	Internal fan 1 running time	RO	U32	hour	10	35002	2	Used to inspect data.
146	Internal alarm	RO	U16	V	1	35010	1	Used for R&D data storage.
147	Internal Temperature 1	RO	I16	°C	10	35021	1	Temperature of INV module A Used for R&D 5-minute data recording.
148	Internal Temperature 2	RO	I16	°C	10	35022	1	Temperature of INV module B Used for R&D 5-minute data recording.
149	Internal Temperature 3	RO	I16	°C	10	35023	1	INV module C temperature Used for R&D 5-minute data recording.

150	Internal Temperature 4	RO	I16	°C	10	35024	1	Temperature sampling of anti-reverse module 1 Used for R&D 5-minute data recording.
151	Internal Temperature 5	RO	I16	°C	10	35025	1	Output board relay, ambient temperature - maximum temperature Used for R&D 5-minute data recording.
152	Internal Temperature 6	RO	I16	°C	10	35026	1	Output board, power board input, and power board inverter temperature sampling - maximum temperature Used for R&D 5-minute data recording.
153	Internal temperature 7	RO	I16	°C	10	35027	1	Temperature sampling of anti-reverse module 2 Used for R&D 5-minute data recording.
154	Internal temperature 8	RO	I16	°C	10	35028	1	DC terminal temperature 1 / 2 - maximum temperature Used for R&D 5-minute data recording.
155	Internal temperature 9	RO	I16	°C	10	35029	1	AC Terminal Temperature 1 / 2 / 3 - Maximum Temperature Used for R&D 5-minute data recording.

156	Internal temperature 10	RO	I16	°C	10	35030	1	Used for R&D data storage.
157	Internal temperature 11	RO	I16	°C	10	35031	1	Used for R&D data storage.
158	Internal temperature 12	RO	I16	°C	10	35032	1	Used for R&D data storage.
159	Phase A DC component DCI	RO	I16	A	1000	35038	1	Used for R&D 5-minute data recording.
160	Phase B DC component DCI	RO	I16	A	1000	35039	1	Used for R&D 5-minute data recording.
161	Phase C DC component DCI	RO	I16	A	1000	35040	1	Used for R&D 5-minute data recording.
162	Leakage current RCD	RO	I16	mA	1	35041	1	Used for R&D 5-minute data recording.
163	Positive bus voltage	RO	I16	V	10	35042	1	Used for R&D 5-minute data recording.
164	Negative bus voltage	RO	I16	V	10	35043	1	Used for R&D 5-minute data recording.
165	BUS negative voltage to ground	RO	I16	V	10	35044	1	Used for R&D 5-minute data recording.
166	I-V scan status	RO	E16			35094	1	

167	I-V scanning capability	RO	E16			35095	1	
168	Deferred activation state	RO	E16			35115	1	
169	Active power adjustment status	RO	MLD			35300	4	
170	Reactive power adjustment status	RO	MLD			35304	4	
171	Inverter comprehensive status	RO	Bitfield16			37518	1	
172	Inverter integrated status support flag	RO	U16		1	37519	1	
173	System time (local time)	RW	Epoch Second	s	1	40000	2	The data is in the epoch second format, that is, the local time.
174	Q-U characteristic curve mode	RW	E16			40037	1	
175	Q-U Scheduling Trigger Power Percentage	RW	I16	%	1	40038	1	

176	Active power is derated by a fixed value.	RW	U16	kW	10	40120	1	
177	Power factor	RW	I16		1000	40122	1	
178	Reactive power compensation (Q/S) [low precision]	RW	I16		1000	40123	1	The equipment end converts the value into a fixed Q value for reactive power control. S is Smax.
179	Reactive power adjustment time	RW	U16	s	1	40124	1	Change requirement: The "Reactive power adjustment time" broadcast interface is added to the Q-P characteristic curve and cosphi-P characteristic curve delivery interface, which is the same as the Q-U characteristic curve 20190918.
180	Active power percentage derating (low precision)	RW	I16	%	10	40125	1	Active power fine adjustment interface
181	Active power is derated by a fixed value.	RW	U32	W	1	40126	2	Value range: [0, Pmax]

182	Night reactive power compensation (Q/S)	RW	I16		1000	40128	1	The equipment end converts the value into a fixed Q value for reactive power control. S is Smax.
183	Fixed value of reactive power at night	RW	I32	kV ar	1000	40129	2	
184	Cos?-P/Pn characteristic curve	RW	MLD			40133	21	
185	Q-U characteristic curve	RW	MLD			40154	21	
186	PF-U characteristic curve	RW	MLD			40175	21	
187	[Characteristic curve] Reactive power adjustment time	RW	U16	s	1	40196	1	Change requirement: The "Reactive power adjustment time" broadcast interface is added to the Q-P characteristic curve and cosphi-P characteristic curve delivery interface, which is the same as the Q-U characteristic curve 20190918.
188	Q-U Scheduling Exit Power Percentage	RW	I16	%	1	40198	1	

189	Active power percent age control [low precision]	RW	I16	%	10	40199	1	This interface is used in distributed mode. It is used to control the active power percentage. It is issued to the power software in the anti-backflow control, and controls the upper limit of the output active power when the power is increased due to underfrequency.
190	Start the system.	WO	E16			40200	1	
191	Shut down.	WO	E16			40201	1	
192	Quick power-on and power-off	WO	E16			40202	1	Not affected by shutdown gradient
193	reset	WO	E16			40205	1	After receiving the command, the DSP responds immediately and then resets. After receiving the command, the inverter monitoring module sends the command to the DSP. After receiving a normal response, the inverter monitoring module sends the command to the northbound port. After 3s, the system is reset. Otherwise, the system does not restart.

194	Q-P characteristic curve	RW	MLD			40354	21	
195	Q-U characteristic curve minimum PF limit	RW	U16		1000	40375	1	This MPI is used to limit the reactive power output by the QU curve by limiting the current PF value. The country code that is not required by this function is set to 0 by default, indicating that the reactive power output is not limited. The country code in EN50549 can be set to 0 to 1, and the default value is 0.9.
196	Q-U characteristic curve validity delay time	RW	U16	s	1	40376	1	After the QU curve reaches the trigger voltage, the reactive power starts to change after a period of time is delayed. Italy CEI0-16/21 requires that the default value be 3s, indicating that the QU curve takes effect after the triggering delay is 3s, which can be set on the GUI. For other countries, the default value is 0.
197	Power grid standard code	RW	U16		1	42000	1	CHINA_MV800 For details about the scope, see the Power Grid Standard Code.

198	Output mode	RW	E16			42001	1	On the customer interface, only read signals can be displayed. Currently, only three-phase three-wire signals are supported. No configuration is required. In the future, the interface changes will be used to notify each interface.
199	Voltage level	RW	U16	V	1	42002	1	Vn
200	Frequency Class	RW	U16	Hz	1	42003	1	Fn
201	Remote power scheduling	RW	E16			42014	1	If this parameter is disabled, the inverter will be locked.
202	reactive power gradient	RW	U32	%/s	1000	42015	2	
203	Active power change gradient	RW	U32	%/s	1000	42017	2	Limits the speed at which the power changes caused by the power scheduling command
204	Scheduled instruction hold time	RW	U32	s	1	42019	2	Permanently valid when the value is 0.
205	Maximum apparent power	RW	U32	kV A	1000	42021	2	["Maximum active power",Smax]
206	Maximum active power	RW	U32	kW	1000	42023	2	[0.1,Pmax]

207	apparent power reference	RW	U32	kVar	1000	42025	2	Sn: upper limit of the maximum active power (PMax), which is used as the reference for reactive power scheduling (Q/S).
208	Active power reference	RW	U32	kW	1000	42027	2	Set the lower limit of the maximum apparent value (SMax), which is also used as the reference for active power scheduling (percentage).
209	Plant active power gradient	RW	U16	min/100%	1	42029	1	China standards require that the active power change caused by light fluctuation must meet the speed requirements during normal operation of the equipment.
210	Plant active average filtering time	RW	U32	ms	1	42030	2	
211	Filtering time for PF-U voltage detection	RW	U16	s	10	42032	1	
212	Dry contact scheduling	RW	E16			42033	1	
213	Audible and visual alarm	RW	E16			42034	1	

214	Frequency Active Power Derating Recovery Delay Time	RW	U16	s	1	42040	1	
215	Frequency Active Power Derating Effective Delay Time	RW	U16	ms	1	42041	1	
216	Frequency active power derating hysteresis	RW	E16			42042	1	
217	Frequency modulation control response dead band	RW	U16	Hz	1000	42043	1	
218	PQ mode	RW	E16			42046	1	
219	PV Panel Type	RW	E16			42047	1	
220	PID compensation direction	RW	E16			42048	1	

221	String connection mode	RW	E16			42049	1	
222	Isolation Settings	RW	E16			42050	1	On the customer interface, only read signals can be displayed. Currently, only the input is not grounded and transformer is supported. Interface changes will be used to notify each interface during setting.
223	Frequency modulation control power change gradient	RW	U16	%/min	1	42051	1	
224	Frequency modulation control power change limiting amplitude	RW	U16	%	10	42052	1	
225	FM control delay response time	RW	U16	ms	1	42053	1	Polish national requirements, open and configurable Initial delay in the frequency sensitive mode
226	MPPT multimodal scanning	RW	E16			42054	1	

227	MPPT scanning interval	RW	U16	min	1	42055	1	
228	Predicted MPPT power	RO	U32	kW	1000	42056	2	
229	Power grid fault recovery automatic startup	RW	E16			42061	1	
230	Power limit 0% shutdown	RW	E16			42062	1	
231	Automatic power-off when communication is disconnected	RW	E16			42063	1	In a parallel system, the system automatically shuts down when the communication link is interrupted by default. The communication interruption duration is 1 minute. The PCS power system determines the priority of the default power policy and the parameter setting. The affected parameters include all parameters under "Communication Disconnection Protection".

232	Automatic power-on after communication recovery	RW	E16			42064	1	
233	Power Quality Optimization Mode	RW	E16			42065	1	
234	RCD Enhancement	RW	E16			42066	1	
235	Night reactive power	RW	E16			42067	1	
236	Night PID protection	RW	E16			42069	1	
237	Night reactive power parameters take effect	RW	E16			42070	1	
238	Communication Disconnection Detection Time	RW	U16	s	1	42072	1	This parameter is displayed when the protection against communication disconnection is enabled.
239	AFCI	RW	E16			42073	1	
240	AFCI detection adaptation mode	RW	E16			42074	1	

241	Communication link failure protection	RW	E16			42075	1	Used to initiate the security protection function after the communication between the device and the northbound interface is interrupted.
242	Failure protection active power mode	RW	E16			42076	1	This parameter is displayed when the protection against communication disconnection is enabled.
243	Active Power Limit for Failure Protection [kW] [Low Precision]	RW	U32	kW	10	42077	2	This parameter is displayed only when the communication link failure protection is set to Enable and the active power mode is set to a fixed value.
244	Failure protection reactive power mode	RW	E16			42079	1	This parameter is displayed when the protection against communication disconnection is enabled.
245	Frequency rate protection	RW	E16			42080	1	
246	Frequency change rate protection point	RW	U16	Hz/s	10	42081	1	
247	Frequency change rate protection time	RW	U16	s	10	42082	1	

248	Reactive power limit for failure protection [Q/S] [low precision]	RW	I16		1000	42083	1	(Deliver Q/S value) This parameter is displayed only when Communication Disconnection Failure Protection is set to Enable and Reactive Power Mode is set to Q/S.
249	Power-on voltage upper limit for grid connection	RW	U16	V	10	42084	1	Parameters for normal reconnection
250	Power-on voltage lower limit for grid connection	RW	U16	V	10	42085	1	Parameters for normal reconnection
251	Power-on frequency upper limit for grid connection	RW	U16	Hz	100	42086	1	Parameters for normal reconnection
252	Power-on frequency lower limit for grid connection	RW	U16	Hz	100	42087	1	Parameters for normal reconnection

253	Power grid reconnection voltage upper limit	RW	U16	V	10	42088	1	Parameters for reconnection after a fault
254	Power Grid Reconnection Voltage Lower Threshold	RW	U16	V	10	42089	1	Parameters for reconnection after a fault
255	Power grid reconnection frequency upper limit	RW	U16	Hz	100	42090	1	Parameters for reconnection after a fault
256	Power grid reconnection frequency lower limit	RW	U16	Hz	100	42091	1	Parameters for reconnection after a fault
257	Automatic Power Grid Reconnection Time	RW	U16	s	1	42092	1	

258	Insulation impedance protection point	RW	U16	MΩ	1000	42097	1	Value range: [0.02, 1.5] Actual protection is implemented by the inverter based on the DC voltage. 600 V DC inverter: [0.02, 1.5] 1000 V DC inverter: [0.033, 1.5] 1500 V DC inverter: [0.05, 1.5]
259	Voltage unbalance protection threshold	RW	U16	%	10	42098	1	
260	Phase protection point	RW	U16	°	10	42099	1	
261	Power-on soft start time due to power grid faults	RW	U16	s	1	42100	1	Power rise gradient during equipment startup after a power grid fault
262	Cos?-P/Pn trigger voltage	RW	U16	%	1	42101	1	
263	Cos?-P/Pn exit voltage	RW	U16	%	1	42102	1	
264	Startup soft start time	RW	U16	s	1	42103	1	

265	Power grid fault recovery time	RW	U16	s	1	42104	1	
266	Time for determining short-term power grid interruption	RW	U32	ms	1	42105	2	Quick Start After Power Grid Fault is enabled and can be set.
267	Shutdown gradient	RW	U32	%/s	1000	42107	2	
268	Line loss compensation	RW	U16	%	10	42109	1	
269	Grid fault zero current mode	RW	E16			42110	1	
270	Grid voltage jump trigger threshold	RW	U16	%	10	42111	1	This parameter can be set only for the VDE4120.
271	HVRT	RW	E16			42112	1	
272	HVRT Trigger Threshold	RW	U16	V	10	42113	1	

273	HVRT positive sequence reactive power compensation factor	RW	U16		10	42114	1	
274	Short-term power grid interruption and quick startup	RW	E16			42116	1	Indicates whether to enable the fast startup function after the power grid recovers from a short-term interruption. If this parameter is set to 0, the power grid is connected according to the normal startup process after a short-term interruption. If this parameter is set to 1, the power grid is enabled. After a short-term interruption occurs on the power grid, the quick startup process is used. Some detection items are skipped and the power grid is quickly connected to the power grid. Whether a short-term interruption occurs on the power grid depends on whether the power grid can be recovered within the "short-term interruption time".

275	LVRT active current maintenance coefficient	RW	U16		100	42118	1	
276	LVRT	RW	E16			42119	1	By default, this function is enabled in the BDEW standard. In other standards, this function is disabled by default.
277	LVRT Trigger Threshold	RW	U16	V	10	42120	1	Sets the threshold for triggering low voltage ride-through. The threshold must comply with the local power grid standards.
278	Power grid voltage protection shield during VRT	RW	E16			42121	1	It is used to set whether the voltage protection function needs to be shielded during the voltage ride-through.

279	LVRT positive sequence reactive power compensation factor	RW	U16		10	42122	1	During the low voltage ride through (LVRT), the device needs to generate positive-sequence reactive power to support the power grid. This parameter is used to set the positive-sequence reactive power emitted by the device. For example, if the LVRT positive-sequence reactive power compensation factor is set to 2, the positive-sequence reactive current generated by the device increases by 20% of the rated current every time the AC voltage decreases by 10% during the low-voltage ride-through process.
280	VRT exit hysteresis threshold	RW	U16	V	10	42123	1	Sets the LVRT/HVRT recovery threshold. LVRT recovery threshold = LVRT trigger threshold + VRT exit hysteresis threshold HVRT recovery threshold = HVRT trigger threshold – VRT exit hysteresis threshold
281	VRT active current limiting percentage	RW	U16	%	1	42124	1	

282	VRT active power recovery gradient	RW	U16	%/s	1	42125	1	
283	HVRT negative sequence reactive compensation factor	RW	U16		10	42126	1	
284	LVRT negative sequence reactive power compensation factor	RW	U16		10	42127	1	During low voltage ride through (LVRT), the device needs to generate negative-sequence reactive power to support the power grid. This parameter is used to set the negative-sequence reactive power emitted by the device. For example, if the LVRT negative sequence reactive power compensation factor is set to 2, the negative sequence reactive current generated by the device increases by 20% of the rated current every time the AC voltage decreases by 10% during the low voltage ride-through process.
285	phase angle deviation protection	RW	E16			42128	1	

286	Active Islanding Protection	RW	E16			42129	1	
287	Passive Islanding Protection	RW	E16			42130	1	
288	OVGR Associated Shutdown	RW	E16			42131	1	
289	Dry contact function	RW	E16			42132	1	
290	LVRT reactive current limiting percentage	RW	U16	%	1	42133	1	During low voltage ride-through, the equipment needs to limit the reactive current emitted by the equipment. For example, if LVRT Reactive Current Limit Percentage is set to 50, the upper limit of the reactive current of the device is 50% of the rated current during low voltage ride-through.
291	LVRT zero current mode threshold	RW	U16	V	10	42134	1	If the zero current mode is enabled and the voltage of the grid is less than the zero current mode threshold during LVRT, the zero current mode is used. Otherwise, the zero current mode is used.
292	LVRT mode	RW	E16			42135	1	

293	RCD current limit	RW	U16	mA	10	42136	1	
294	Voltage rise suppression	RW	E16			42138	1	
295	Voltage rise suppression reactive power adjustment point	RW	U16	%	10	42139	1	The value of "Voltage Rise Reject Active Derating Point" must be greater than the value of "Voltage Rise Reject Reactive Adjust Point".
296	Voltage rise suppression active derating threshold	RW	U16	%	10	42140	1	The value of "Voltage Rise Reject Active Derating Point" must be greater than the value of "Voltage Rise Reject Reactive Adjust Point".
297	frequency modulation control	RW	E16			42141	1	According to the standards of some countries or regions, the power grid frequency changes around the rated value. If the device needs to fine-tune the active power output based on the frequency modulation control adjustment rate to help stabilize the power grid frequency, set this parameter to Enable. Frequency sensitive mode (FSM), which is required by the G99 standard.

298	frequency modulation control differential modulation rate	RW	U16	%	1	42142	1	Frequency sensitive mode (FSM) Droop, which is required by the G99 standard.
299	Overfrequency derating	RW	E16			42143	1	If this parameter is set to Enable, the device derates the active power based on a certain gradient when the power grid frequency exceeds the triggering frequency of overfrequency derating.
300	Overfrequency derating cutoff frequency	RW	U16	Hz	100	42144	1	Specifies the cutoff frequency for overfrequency derating.
301	Overfrequency derating cut-off power	RW	U16	%	1	42145	1	Indicates the cutoff power point for overfrequency derating.
302	Triggering frequency of overfrequency derating	RW	U16	Hz	100	42146	1	According to the standards in some countries or regions, the active power output by the device must be derated when the power grid frequency exceeds a specified value.
303	Overfrequency derating exit frequency	RW	U16	Hz	100	42147	1	Specifies the exit frequency of overfrequency derating.

304	Overfrequency derating power recovery gradient	RW	U16	%/min	1	42148	1	Indicates the speed at which the overfrequency derating power recovers.
305	Underfrequency Power Increase	RW	E16			42151	1	According to the standards in some countries or regions, the power grid frequency is lower than the triggering frequency of underfrequency power increase. In this case, the active power output needs to be increased to help increase the power grid frequency. In this case, set this parameter to Enable.
306	Underfrequency Power Increase Recovery Gradient	RW	U16	%/min	1	42152	1	Indicates the speed for recovering the underfrequency power increase.
307	LVRT characteristic curve	RW	MLD			42155	21	Set the low-voltage ride-through capability of the equipment. For details, see the Key Information Description Table. The SmartLogger and NMS support batch settings and provide a separate GUI for users to edit.

308	Cutoff frequency of underfrequency power increase	RW	U16	Hz	100	42176	1	Indicates the cutoff frequency for underfrequency power increase.
309	Cut-off power for underfrequency power increase	RW	U16	%	1	42177	1	Indicates the cutoff power point for underfrequency power increase.
310	Underfrequency Power Increase Triggering Frequency	RW	U16	Hz	100	42178	1	Set the triggering frequency for underfrequency power increase.
311	Underfrequency Power Increase Exit Frequency	RW	U16	Hz	100	42179	1	Specifies the exit frequency for underfrequency power increase.
312	Built-in PID mode	RW	E16			42180	1	
313	PID output voltage	RW	I16	V	10	42181	1	Fixed output. This interface is reserved. The GUI is closed.
314	PID	RW	E16			42182	1	Currently reserved only for equipment
315	Night off-grid repair	RW	E16			42183	1	

316	Active power change gradient	RW	U32	%/s	1000	42192	2	Dedicated broadcast interface for the SmartLogger, which does not support incremental reporting and is used in the remote output scenario in Japan.
317	Q-U curve	RW	MLD			42200	21	
318	P-U curve	RW	MLD			42221	21	
319	P-U curve adjustment time	RW	U16	s	100	42242	1	
320	Undervoltage protection threshold for 10 minutes	RW	U16	V	10	42287	1	Vn: indicates the voltage level, which is related to the power grid code.
321	Ten-minute undervoltage protection time	RW	U32	ms	1	42288	2	
322	Ten-minute overvoltage protection threshold	RW	U16	V	10	42290	1	Vn: indicates the voltage level, which is related to the power grid code.
323	Ten-minute overvoltage protection time	RW	U32	ms	1	42291	2	

324	Level-1 overvoltage protection threshold	RW	U16	V	10	42293	1	Vn: indicates the voltage level, which is related to the power grid code.
325	Level-1 overvoltage protection time	RW	U32	ms	1	42294	2	
326	Level-2 overvoltage protection threshold	RW	U16	V	10	42296	1	Vn: indicates the voltage level, which is related to the power grid code.
327	Level 2 Overvoltage Protection Time	RW	U32	ms	1	42297	2	
328	Level-3 overvoltage protection threshold	RW	U16	V	10	42299	1	Vn: indicates the voltage level, which is related to the power grid code.
329	Level-3 overvoltage protection time	RW	U32	ms	1	42300	2	
330	Level-4 overvoltage protection threshold	RW	U16	V	10	42302	1	Vn: indicates the voltage level, which is related to the power grid code.

33 1	Level-4 overvolt age protecti on time	RW	U3 2	ms	1	42303	2	
33 2	Level-5 overvolt age protecti on threshol d	RW	U1 6	V	10	42305	1	Vn: indicates the voltage level, which is related to the power grid code.
33 3	Level-5 overvolt age protecti on time	RW	U3 2	ms	1	42306	2	
33 4	Level-6 overvolt age protecti on threshol d	RW	U1 6	V	10	42308	1	Vn: indicates the voltage level, which is related to the power grid code.
33 5	Level-6 overvolt age protecti on time	RW	U3 2	ms	1	42309	2	
33 6	Level-1 undervo ltage protecti on threshol d	RW	U1 6	V	10	42311	1	Vn: indicates the voltage level, which is related to the power grid code.
33 7	Level-1 Underv oltage Protecti on Time	RW	U3 2	ms	1	42312	2	

338	Level-2 undervoltage protection threshold	RW	U16	V	10	42314	1	Vn: indicates the voltage level, which is related to the power grid code.
339	Level 2 Undervoltage Protection Time	RW	U32	ms	1	42315	2	
340	Level-3 undervoltage protection threshold	RW	U16	V	10	42317	1	Vn: indicates the voltage level, which is related to the power grid code.
341	Level-3 Undervoltage Protection Time	RW	U32	ms	1	42318	2	
342	Level-4 undervoltage protection threshold	RW	U16	V	10	42320	1	Vn: indicates the voltage level, which is related to the power grid code.
343	Level-4 Undervoltage Protection Time	RW	U32	ms	1	42321	2	
344	Level-5 undervoltage protection threshold	RW	U16	V	10	42323	1	Vn: indicates the voltage level, which is related to the power grid code.

345	Level-5 Undervoltage Protection Time	RW	U32	ms	1	42324	2	
346	Level-6 undervoltage protection threshold	RW	U16	V	10	42326	1	Vn: indicates the voltage level, which is related to the power grid code.
347	Level-6 Undervoltage Protection Time	RW	U32	ms	1	42327	2	
348	Level-1 overfrequency protection threshold	RW	U16	Hz	100	42329	1	Fn: indicates the frequency level, which is related to the power grid code.
349	Level-1 Overfrequency Protection Time	RW	U32	ms	1	42330	2	
350	Level-2 overfrequency protection threshold	RW	U16	Hz	100	42332	1	Fn: indicates the frequency level, which is related to the power grid code.
351	Level-2 overfrequency protection time	RW	U32	ms	1	42333	2	

35 2	Level-3 overfre quency protecti on threshol d	RW	U1 6	Hz	100	42335	1	Fn: indicates the frequency level, which is related to the power grid code.
35 3	Level-3 overfre quency protecti on time	RW	U3 2	ms	1	42336	2	
35 4	Level-4 overfre quency protecti on threshol d	RW	U1 6	Hz	100	42338	1	Fn: indicates the frequency level, which is related to the power grid code.
35 5	Level-4 overfre quency protecti on time	RW	U3 2	ms	1	42339	2	
35 6	Level-5 overfre quency protecti on threshol d	RW	U1 6	Hz	100	42341	1	Fn: indicates the frequency level, which is related to the power grid code.
35 7	Level-5 overfre quency protecti on time	RW	U3 2	ms	1	42342	2	
35 8	Level-6 overfre quency protecti on threshol d	RW	U1 6	Hz	100	42344	1	Fn: indicates the frequency level, which is related to the power grid code.

359	Six-level overfrequency protection time	RW	U32	ms	1	42345	2	
360	Level-1 underfrequency protection threshold	RW	U16	Hz	100	42347	1	Fn: indicates the frequency level, which is related to the power grid code.
361	Level-1 Underfrequency Protection Time	RW	U32	ms	1	42348	2	
362	Level-2 underfrequency protection threshold	RW	U16	Hz	100	42350	1	Fn: indicates the frequency level, which is related to the power grid code.
363	Level-2 underfrequency protection time	RW	U32	ms	1	42351	2	
364	Level-3 underfrequency protection threshold	RW	U16	Hz	100	42353	1	Fn: indicates the frequency level, which is related to the power grid code.
365	Level-3 underfrequency protection time	RW	U32	ms	1	42354	2	

366	Level-4 underfrequency protection threshold	RW	U16	Hz	100	42356	1	Fn: indicates the frequency level, which is related to the power grid code.
367	Level-4 Underfrequency Protection Time	RW	U32	ms	1	42357	2	
368	Level-5 underfrequency protection threshold	RW	U16	Hz	100	42359	1	Fn: indicates the frequency level, which is related to the power grid code.
369	Level-5 Underfrequency Protection Time	RW	U32	ms	1	42360	2	
370	Level-6 underfrequency protection threshold	RW	U16	Hz	100	42362	1	Fn: indicates the frequency level, which is related to the power grid code.
371	Level-6 Underfrequency Protection Time	RW	U32	ms	1	42363	2	
372	Delayed upgrade	RW	E16			42590	1	

373	Intelligent string monitoring	RW	E16			42594	1	
374	String detection reference asymmetry coefficient	RW	U16		100	42595	1	
375	String detection start power percentage	RW	U16	%	1	42596	1	
376	Communication Interruption Time	RW	I16	min	1	42597	1	
377	PMI	WO	E16			42730	1	Broadcast command interface Note: The instruction range extension design is made here. The higher eight bits are used to mask specified inspection actions in the inspection function. This feature improves the inspection efficiency for specific purposes. Shen Yanbai 20190702
378	IV Curve Scanning	WO	E16			42779	1	Broadcast command interface
379	[System Time] Year	WO	U16		1	43000	1	

380	[System Time] Month	WO	U16		1	43001	1	
381	[System time] day	WO	U16		1	43002	1	
382	[System time] hour	WO	U16		1	43003	1	
383	[System Time] Min.	WO	U16		1	43004	1	
384	[System Time] Second	WO	U16		1	43005	1	
385	Time zone	RW	I16	min	1	43006	1	
386	Clock source	RW	E16			43007	1	
387	City code	RW	U32			43008	2	(UTC+08:00) Beijing
388	Inverter Installation Position Longitude	RW	I32	°	10000000	43014	2	Set this parameter only on the app. The NMS can read the data.
389	Inverter Installation Position Latitude	RW	I32	°	10000000	43016	2	Set this parameter only on the app. The NMS can read the data.
390	[RS485-1] Protocol Type	RW	E16			43018	1	
391	[RS485-1] Communication address	RW	U16		1	43019	1	0: broadcast address; 1-247: device address; 248-255: reserved
392	[RS485-1] Baud Rate	RW	E16			43020	1	115200 baud rate, corresponding to bit 26 of feature code 3.

393	[RS485-1] Verification mode	RW	E16			43021	1	
394	[RS485-1] Port mode	RW	E16			43022	1	
395	[RS485-1] Modbus Protocol Model Version	RW	E16			43023	1	This parameter is used only when the northbound port is used in the old model replacement scenario.
396	[RS485-2] Protocol Type	RW	E16			43033	1	
397	[RS485-2] Communication address	RW	U16		1	43034	1	0: broadcast address 1-247: device address 248-255: reserved
398	[RS485-2] Baud Rate	RW	E16			43035	1	115200 baud rate, corresponding to bit 27 of feature code 3.
399	[RS485-2] Verification Mode	RW	E16			43036	1	
400	[RS485-2] Port mode	RW	E16			43037	1	
401	Device name	RW	STR			43349	10	This parameter is left blank by default. It is used by the customer to modify the device name.
402	[App] Initial power-on flag	RW	E16			43359	1	After the SmartLogger is deployed, the power-on flag needs to be cleared.

403	Restore factory settings.	WO	E16			45000	1	
404	Clearing active alarms	WO	MLD			45001	2	
405	Alarm setting	WO	MLD			45003	2	
406	Alarm clearance	WO	E16			45005	1	
407	Alarm masking	WO	E16			45006	1	
408	AFCI self-check start	WO	U16		1	45007	1	Set the field to 0. Associate the AFCI controller in the in-position ID of the subdevice.
409	Accumulated energy yield correction	WO	U32	kWh	100	45008	2	
410	Clear historical battery level.	WO	E16			45010	1	Including the accumulated power generation capacity and accumulated charging capacity on the power side
411	Clear the running time information.	WO	E16			45011	1	Clears the accumulated running time, fault duration, and grid-tied running time.
412	Spot Check	WO	E16			45012	1	
413	ESN validation command	WO	U16		1	45015	1	

414	Restore the default password.	WO	MLD		1	45016	10	Enter the equipment ESN in the Data field.
415	Battery charging mode	RW	ENUM16	NA	NA	47086	1	0: adaptive (fixed charge/discharge/maximum self-use) 1: fixed charge/discharge 2: maximum self-use 3: time-of-use electricity price 4: full Internet access 5:TOU 6: third-party scheduling
416	Battery charge and discharge power	RW	INT32	W	1	47321	1	> 0: charging; < 0: discharging; 0: not charging or discharging
417	[Inverter level] Remote control mode for charging and discharging	RW	ENUM16	NA	NA	47589	1	0: near-end control 1: remote control-maximum self-use 2: remote control-full Internet access 3: remote control-Dong 4: remote control - AI energy management and scheduling 5: remote control-three-party scheduling

NOTICE

Signals marked with * are supported only by certain models or standard codes.

4.2 Battery Equipment Register

Table 4-1 Battery Equipment Registe definitions

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
1	[Energy storage unit 1] [1] Running status	RO	UINT16	N/A	1	37000	1	0: offline 1: standby 2: running 3: fault 4: sleep mode
2	[Energy storage unit 1] Charge and discharge power	RO	INT32	W	1	37001	2	> 0: charging < 0: discharging
3	[Energy storage unit 1] Bus voltage	RO	UINT16	V	10	37003	1	Energy storage module output voltage
4	[Energy storage unit 1] Battery SOC	RO	UINT16	%	10	37004	1	Battery's state of capacity

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
5	[Energy storage unit 1] Working mode	RO	UINT16	N/A	1	37006	1	0:none 1:Forcible charge / discharge 2:Time of Use(LG) 3:Fixed charge / discharge 4:Maximise self consumption 5:Fully fed to grid 6:Time of Use(LUNA2000) 7:remote scheduling-maximum self-use 8:remote scheduling - full Intern

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
								et access 9: remot e sched uling - TOU 10: AI energy mana geme nt and sched uling
6	[Energy storage unit 1] Rated charge power	RO	UINT 32	W	1	37007	2	-
7	[Energy storage unit 1] Rated discharge power	RO	UINT 32	W	1	37009	2	-
8	[Energy storage unit 1] Fault ID	RO	UINT 16	N/A	1	37014	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
9	[Energy storage unit 1] Current-day charge capacity	RO	UINT32	kWh	100	37015	2	-
10	[Energy storage unit 1] Current-day discharge capacity	RO	UINT32	kWh	100	37017	2	-
11	[Energy storage unit 1] Bus current	RO	INT16	A	10	37021	1	Energy storage module output current
12	[Energy storage unit 1] battery temperature	RO	INT16	℃	10	37022	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
13	[Energy storage unit 1] Remaining charge / discharge time	RO	UINT16	mins	1	37025	1	[0,1440]
14	[Energy storage unit 1] DCDCversion	RO	STRING	N/A	1	37026	10	eg. 7kW-V1.3
15	[Energy storage unit 1] BMSversion	RO	STRING	N/A	1	37036	10	eg. 001.002.003.004

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
16	[Energy storage]Maximum charge power	RO	UINT32	W	1	37046	2	The value is the smaller value of the sum of the maximum charge and discharge capability of the solar inverter and the charge and discharge capability of the connected energy storage unit (ESU).

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
17	[Energy storage] Maximum discharge power	RO	UINT32	W	1	37048	2	The value is the smaller value of the sum of the maximum charge and discharge capability of the solar inverter and the charge and discharge capability of the connected ESU.
18	[Energy storage unit 1] SN	RO	STRING	N/A	1	37052	10	-
19	[Energy storage unit 1] Total charge	RO	UINT32	kWh	100	37066	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
20	[Energy storage unit 1] Total discharge	RO	UINT32	kWh	100	37068	2	-
21	[Energy storage unit 2] SN	RO	BYTES	N/A	1	37700	10	-
22	[Energy storage unit 2] Battery SOC	RO	UINT16	%	10	37738	1	Battery's state of capacity
23	[Energy storage unit 2] Running status	RO	UINT16	N/A	1	37741	1	0: offline 1: standby 2: running 3: fault 4: sleep mode
24	[Energy storage unit 2] Charge and discharge power	RO	INT32	W	1	37743	2	> 0: charging < 0: discharging

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
25	[Energy storage unit 2] Current-day charge capacity	RO	UINT32	kWh	100	37746	2	-
26	[Energy storage unit 2] Current-day discharge capacity	RO	UINT32	kWh	100	37748	2	-
27	[Energy storage unit 2] Bus voltage	RO	UINT16	V	10	37750	1	-
28	[Energy storage unit 2] Bus current	RO	INT16	A	10	37751	1	-
29	[Energy storage unit 2] Battery temperature	RO	INT16	℃	10	37752	1	

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
30	[Energy storage unit 2] Total charge	RO	UINT 32	kWh	100	37753	2	-
31	[Energy storage unit 2] Total discharge	RO	UINT 32	kWh	100	37755	2	-
32	[Energy storage]Rate d capacity	RO	UINT 32	Wh	1	37758	2	
33	[Energy storage]SOC	RO	UINT 16	%	10	37760	1	[0.0,100.0]
34	[Energy storage]Running status	RO	UINT 16	N/A	1	37762	1	0: offline 1: standby 2: running 3: fault 4: sleep mode
35	[Energy storage]Bus voltage	RO	UINT 16	V	10	37763	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
36	[Energy storage]Bus current	RO	INT16	A	10	37764	1	-
37	[Energy storage]Charge/Discharge power	RO	INT32	W	1	37765	2	-
38	[Energy storage]Total charge	RO	UINT32	kWh	100	37780	2	Life-cycle accumulation
39	[Energy storage]Total discharge	RO	UINT32	kWh	100	37782	2	Life-cycle accumulation
40	[Energy storage]Current-day charge capacity	RO	UINT32	kWh	100	37784	2	Current-day accumulation
41	[Energy storage]Current-day discharge capacity	RO	UINT32	kWh	100	37786	2	Current-day accumulation

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
42	[Energy storage unit 2] software version	RO	STRING	N/A	1	37799	15	-
43	[Energy storage unit 1] software version	RO	STRING	N/A	1	37814	15	-
44	[Energy storage unit 1] [Battery pack1] SOH Calibration Status	RO	UINT16	N/A	N/A	37920	1	
45	[Energy storage unit 1] [Battery pack2] SOH Calibration Status	RO	UINT16	N/A	N/A	37921	1	

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
46	[Energy storage unit 1] [Battery pack3]]SOH Calibration Status	RO	UINT16	N/A	N/A	37922	1	
47	[Energy storage unit 2] [Battery pack1]]SOH Calibration Status	RO	UINT16	N/A	N/A	37923	1	
48	[Energy storage unit 2] [Battery pack2]]SOH Calibration Status	RO	UINT16	N/A	N/A	37924	1	

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
49	[Energy storage unit 2] [Battery pack3] [SOH Calibration Status]	RO	UINT16	N/A	N/A	37925	1	
50	SOH Calibration Status	RO	UINT16	N/A	1	37926	1	
51	SOH Calibration Release the lower discharge limit of the SOC	RO	UINT16	N/A	10	37927	1	
52	SOH Calibration Enable the backup power SOC.	RO	UINT16	N/A	10	37928	1	
53	[Parallel system] Manual battery health check	RW	ENUM16	N/A	N/A	48219	1	0: stop 1: start

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
54	[Energy storage unit 1] [Battery pack1]]SN	RO	STRING	N/A	N/A	38200	10	-
55	[Energy storage unit 1] [Battery pack1]]Firmware version	RO	STRING	N/A	N/A	38210	15	-
56	[Energy storage unit 1] [Battery pack1]]Working status	RO	UINT16	N/A	N/A	38228	1	-
57	[Energy storage unit 1] [Battery pack1]]SOC	RO	UINT16	%	10	38229	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
58	[Energy storage unit 1] [Battery pack1]]Charge/Discharge power	RO	INT32	kW	1000	38233	2	-
59	[Energy storage unit 1] [Battery pack1]]Voltage	RO	UINT16	V	10	38235	1	-
60	[Energy storage unit 1] [Battery pack1]]Current	RO	INT16	A	10	38236	1	-
61	[Energy storage unit 1] [Battery pack1]]Total charge	RO	UINT32	kWh	100	38238	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
62	[Energy storage unit 1] [Battery pack1] Total discharge	RO	UINT32	kWh	100	38240	2	-
63	[Energy storage unit 1] [Battery pack2] SN	RO	STRING	N/A	N/A	38242	10	-
64	[Energy storage unit 1] [Battery pack2] Firmware version	RO	STRING	N/A	N/A	38252	15	-
65	[Energy storage unit 1] [Battery pack2] Working status	RO	UINT16	N/A	N/A	38270	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
66	[Energy storage unit 1] [Battery pack2] SOC	RO	UINT16	%	10	38271	1	-
67	[Energy storage unit 1] [Battery pack2] Charge/Discharge power	RO	INT32	kW	1000	38275	2	-
68	[Energy storage unit 1] [Battery pack2] Voltage	RO	UINT16	V	10	38277	1	-
69	[Energy storage unit 1] [Battery pack2] Current	RO	INT16	A	10	38278	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
70	[Energy storage unit 1] [Battery pack2]]Total charge	RO	UINT32	kWh	100	38280	2	-
71	[Energy storage unit 1] [Battery pack2]]Total discharge	RO	UINT32	kWh	100	38282	2	-
72	[Energy storage unit 1] [Battery pack3]]SN	RO	STRING	N/A	N/A	38284	10	-
73	[Energy storage unit 1] [Battery pack3]]Firmware version	RO	STRING	N/A	N/A	38294	15	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
74	[Energy storage unit 1] [Battery pack3] Working status	RO	UINT16	N/A	N/A	38312	1	-
75	[Energy storage unit 1] [Battery pack3] SOC	RO	UINT16	%	10	38313	1	-
76	[Energy storage unit 1] [Battery pack3] Charge/Discharge power	RO	INT32	kW	1000	38317	2	-
77	[Energy storage unit 1] [Battery pack3] Voltage	RO	UINT16	V	10	38319	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
78	[Energy storage unit 1] [Battery pack3] Current	RO	INT16	A	10	38320	1	-
79	[Energy storage unit 1] [Battery pack3] Total charge	RO	UINT32	kWh	100	38322	2	-
80	[Energy storage unit 1] [Battery pack3] Total discharge	RO	UINT32	kWh	100	38324	2	-
81	[Energy storage unit 2] [Battery pack1] SN	RO	STRING	N/A	N/A	38326	10	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
82	[Energy storage unit 2] [Battery pack1]]Firmware version	RO	STRING	N/A	N/A	38336	15	-
83	[Energy storage unit 2] [Battery pack1]]Working status	RO	UINT16	N/A	N/A	38354	1	-
84	[Energy storage unit 2] [Battery pack1]]SOC	RO	UINT16	%	10	38355	1	-
85	[Energy storage unit 2] [Battery pack1]]Charge/Discharge power	RO	INT32	kW	1000	38359	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
86	[Energy storage unit 2] [Battery pack1]Voltage	RO	UINT16	V	10	38361	1	-
87	[Energy storage unit 2] [Battery pack1]Current	RO	INT16	A	10	38362	1	-
88	[Energy storage unit 2] [Battery pack1]Total charge	RO	UINT32	kWh	100	38364	2	-
89	[Energy storage unit 2] [Battery pack1]Total discharge	RO	UINT32	kWh	100	38366	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
90	[Energy storage unit 2] [Battery pack2]]SN	RO	STRING	N/A	N/A	38368	10	-
91	[Energy storage unit 2] [Battery pack2]]Firmware version	RO	STRING	N/A	N/A	38378	15	-
92	[Energy storage unit 2] [Battery pack2]]Working status	RO	UINT16	N/A	N/A	38396	1	-
93	[Energy storage unit 2] [Battery pack2]]SOC	RO	UINT16	%	10	38397	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
94	[Energy storage unit 2] [Battery pack2]]Charge/Discharge power	RO	INT32	kW	1000	38401	2	-
95	[Energy storage unit 2] [Battery pack2]]Voltage	RO	UINT16	V	10	38403	1	-
96	[Energy storage unit 2] [Battery pack2]]Current	RO	INT16	A	10	38404	1	-
97	[Energy storage unit 2] [Battery pack2]]Total charge	RO	UINT32	kWh	100	38406	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
98	[Energy storage unit 2] [Battery pack2] Total discharge	RO	UINT32	kWh	100	38408	2	-
99	[Energy storage unit 2] [Battery pack3] SN	RO	STRING	N/A	N/A	38410	10	-
100	[Energy storage unit 2] [Battery pack3] Firmware version	RO	STRING	N/A	N/A	38420	15	-
101	[Energy storage unit 2] [Battery pack3] Working status	RO	UINT16	N/A	N/A	38438	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
102	[Energy storage unit 2] [Battery pack3] [SOC]	RO	UINT16	%	10	38439	1	-
103	[Energy storage unit 2] [Battery pack3] [Charge/Discharge power]	RO	INT32	kW	1000	38443	2	-
104	[Energy storage unit 2] [Battery pack3] [Voltage]	RO	UINT16	V	10	38445	1	-
105	[Energy storage unit 2] [Battery pack3] [Current]	RO	INT16	A	10	38446	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
106	[Energy storage unit 2] [Battery pack3] Total charge	RO	UINT32	kWh	100	38448	2	-
107	[Energy storage unit 2] [Battery pack3] Total discharge	RO	UINT32	kWh	100	38450	2	-
108	[Energy storage unit 1] [Battery pack1] Maximum temperature	RO	INT16	℃	10	38452	1	-
109	[Energy storage unit 1] [Battery pack1] Minimum temperature	RO	INT16	℃	10	38453	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
110	[Energy storage unit 1] [Battery pack2] Maximum temperature	RO	INT16	℃	10	38454	1	-
111	[Energy storage unit 1] [Battery pack2] Minimum temperature	RO	INT16	℃	10	38455	1	-
112	[Energy storage unit 1] [Battery pack3] Maximum temperature	RO	INT16	℃	10	38456	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
113	[Energy storage unit 1] [Battery pack3]]Minimum temperature	RO	INT16	℃	10	38457	1	-
114	[Energy storage unit 2] [Battery pack1]]Maximum temperature	RO	INT16	℃	10	38458	1	-
115	[Energy storage unit 2] [Battery pack1]]Minimum temperature	RO	INT16	℃	10	38459	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
116	[Energy storage unit 2] [Battery pack2] Maximum temperature	RO	INT16	℃	10	38460	1	-
117	[Energy storage unit 2] [Battery pack2] Minimum temperature	RO	INT16	℃	10	38461	1	-
118	[Energy storage unit 2] [Battery pack3] Maximum temperature	RO	INT16	℃	10	38462	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
119	[Energy storage unit 2] [Battery pack3] Minimum temperature	RO	INT16	℃	10	38463	1	-
120	[Energy storage unit 3] Running status	RO	UINT16	N/A	1	38496	1	0: offline 1: standby 2: running 3: fault 4: sleep mode
121	[Energy storage unit 3] Charge and discharge power	RO	INT32	W	1	38497	2	> 0: charging < 0: discharging
122	[Energy storage unit 3] Bus voltage	RO	UINT16	V	10	38499	1	Energy storage module output voltage

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
123	[Energy storage unit 3] Battery SOC	RO	UINT 16	%	10	38500	1	Battery's state of capacity
124	[Energy storage unit 3] Rated charge power	RO	UINT 32	W	1	38502	2	-
125	[Energy storage unit 3] Rated discharge power	RO	UINT 32	W	1	38504	2	-
126	[Energy storage unit 3] Current-day charge capacity	RO	UINT 32	kWh	100	38506	2	-
127	[Energy storage unit 3] Current-day discharge capacity	RO	UINT 32	kWh	100	38508	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
128	[Energy storage unit 3] Bus current	RO	INT16	A	10	38510	1	Energy storage module output current
129	[Energy storage unit 3] battery temperature	RO	INT16	°C	10	38511	1	-
130	[Energy storage unit 3] Remaining charge / discharge time	RO	UINT16	mins	1	38512	1	[0,1440]
131	[Energy storage unit 3] DCDC version	RO	STRING	N/A	1	38513	10	eg. 7kW-V1.3
132	[Energy storage unit 3] BMS version	RO	STRING	N/A	1	38523	10	eg. 001. 002. 003. 004

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
133	[Energy storage unit 3] SN	RO	STRING	N/A	1	38533	10	-
134	[Energy storage unit 3] Total charge	RO	UINT32	kWh	100	38544	2	-
135	[Energy storage unit 3] Total discharge	RO	UINT32	kWh	100	38546	2	-
136	[Energy storage unit 3] software version	RO	STRING	N/A	1	38551	15	-
137	[Energy storage unit 3] [Battery pack1]SN	RO	STRING	N/A	N/A	38566	10	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
138	[Energy storage unit 3] [Battery pack1]]Firmware version	RO	STRING	N/A	N/A	38576	15	-
139	[Energy storage unit 3] [Battery pack1]]Working status	RO	UINT16	N/A	N/A	38591	1	-
140	[Energy storage unit 3] [Battery pack1]]SOC	RO	UINT16	%	10	38592	1	-
141	[Energy storage unit 3] [Battery pack1]]Charge/Discharge power	RO	INT32	kW	1000	38594	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
142	[Energy storage unit 3] [Battery pack1] Voltage	RO	UINT16	V	10	38596	1	-
143	[Energy storage unit 3] [Battery pack1] Current	RO	INT16	A	10	38597	1	-
144	[Energy storage unit 3] [Battery pack1] Total charge	RO	UINT32	kWh	100	38598	2	-
145	[Energy storage unit 3] [Battery pack1] Total discharge	RO	UINT32	kWh	100	38600	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
146	[Energy storage unit 3] [Battery pack1]]SOH Calibration Status	RO	UINT16	N/A	N/A	38602	1	
147	[Energy storage unit 3] [Battery pack2]]SN	RO	STRING	N/A	N/A	38603	10	-
148	[Energy storage unit 3] [Battery pack2]]Firmware version	RO	STRING	N/A	N/A	38613	15	-
149	[Energy storage unit 3] [Battery pack2]]Working status	RO	UINT16	N/A	N/A	38628	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
150	[Energy storage unit 3] [Battery pack2] SOC	RO	UINT16	%	10	38629	1	-
151	[Energy storage unit 3] [Battery pack2] Charge/Discharge power	RO	INT32	kW	1000	38631	2	-
152	[Energy storage unit 3] [Battery pack2] Voltage	RO	UINT16	V	10	38633	1	-
153	[Energy storage unit 3] [Battery pack2] Current	RO	INT16	A	10	38634	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
154	[Energy storage unit 3] [Battery pack2]]Total charge	RO	UINT32	kWh	100	38635	2	-
155	[Energy storage unit 3] [Battery pack2]]Total discharge	RO	UINT32	kWh	100	38637	2	-
156	[Energy storage unit 3] [Battery pack2]]SOH Calibration Status	RO	UINT16	N/A	N/A	38639	1	
157	[Energy storage unit 3] [Battery pack3]]SN	RO	STRING	N/A	N/A	38640	10	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
158	[Energy storage unit 3] [Battery pack3] Firmware version	RO	STRING	N/A	N/A	38650	15	-
159	[Energy storage unit 3] [Battery pack3] Working status	RO	UINT16	N/A	N/A	38665	1	-
160	[Energy storage unit 3] [Battery pack3] SOC	RO	UINT16	%	10	38666	1	-
161	[Energy storage unit 3] [Battery pack3] Charge/Discharge power	RO	INT32	kW	1000	38668	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
162	[Energy storage unit 3] [Battery pack3]Voltage	RO	UINT16	V	10	38670	1	-
163	[Energy storage unit 3] [Battery pack3]Current	RO	INT16	A	10	38671	1	-
164	[Energy storage unit 3] [Battery pack3]Total charge	RO	UINT32	kWh	100	38672	2	-
165	[Energy storage unit 3] [Battery pack3]Total discharge	RO	UINT32	kWh	100	38674	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
166	[Energy storage unit 3] [Battery pack3] [SOH Calibration Status]	RO	UINT16	N/A	N/A	38676	1	
167	[Energy storage unit 3] [Battery pack1] [Maximum temperature]	RO	INT16	℃	10	38677	1	-
168	[Energy storage unit 3] [Battery pack1] [Minimum temperature]	RO	INT16	℃	10	38678	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
169	[Energy storage unit 3] [Battery pack2] Maximum temperature	RO	INT16	℃	10	38679	1	-
170	[Energy storage unit 3] [Battery pack2] Minimum temperature	RO	INT16	℃	10	38680	1	-
171	[Energy storage unit 3] [Battery pack3] Maximum temperature	RO	INT16	℃	10	38681	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
172	[Energy storage unit 3] [Battery pack3] Minimum temperature	RO	INT16	℃	10	38682	1	-
173	[Energy storage unit 4] Running status	RO	UINT16	N/A	1	38698	1	0: offline 1: standby 2: running 3: fault 4: sleep mode
174	[Energy storage unit 4] Charge and discharge power	RO	INT32	W	1	38699	2	> 0: charging < 0: discharging
175	[Energy storage unit 4] Bus voltage	RO	UINT16	V	10	38701	1	Energy storage module output voltage

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
176	[Energy storage unit 4] Battery SOC	RO	UINT 16	%	10	38702	1	Battery's state of capacity
177	[Energy storage unit 4] Rated charge power	RO	UINT 32	W	1	38704	2	-
178	[Energy storage unit 4] Rated discharge power	RO	UINT 32	W	1	38706	2	-
179	[Energy storage unit 4] Current-day charge capacity	RO	UINT 32	kWh	100	38708	2	-
180	[Energy storage unit 4] Current-day discharge capacity	RO	UINT 32	kWh	100	38710	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
181	[Energy storage unit 4] Bus current	RO	INT16	A	10	38712	1	Energy storage module output current
182	[Energy storage unit 4] battery temperature	RO	INT16	°C	10	38713	1	-
183	[Energy storage unit 4] Remaining charge / discharge time	RO	UINT16	mins	1	38714	1	[0,1440]
184	[Energy storage unit 4] DCDC version	RO	STRING	N/A	1	38715	10	eg. 7kW-V1.3
185	[Energy storage unit 4] BMS version	RO	STRING	N/A	1	38725	10	eg. 001. 002. 003. 004

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
186	[Energy storage unit 4] SN	RO	STRING	N/A	1	38735	10	-
187	[Energy storage unit 4] Total charge	RO	UINT32	kWh	100	38746	2	-
188	[Energy storage unit 4] Total discharge	RO	UINT32	kWh	100	38748	2	-
189	[Energy storage unit 4] software version	RO	STRING	N/A	1	38753	15	-
190	[Energy storage unit 4] [Battery pack1]SN	RO	STRING	N/A	N/A	38768	10	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
191	[Energy storage unit 4] [Battery pack1]]Firmware version	RO	STRING	N/A	N/A	38778	15	-
192	[Energy storage unit 4] [Battery pack1]]Working status	RO	UINT16	N/A	N/A	38793	1	-
193	[Energy storage unit 4] [Battery pack1]]SOC	RO	UINT16	%	10	38794	1	-
194	[Energy storage unit 4] [Battery pack1]]Charge/Discharge power	RO	INT32	kW	1000	38796	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
195	[Energy storage unit 4] [Battery pack1]Voltage	RO	UINT16	V	10	38798	1	-
196	[Energy storage unit 4] [Battery pack1]Current	RO	INT16	A	10	38799	1	-
197	[Energy storage unit 4] [Battery pack1]Total charge	RO	UINT32	kWh	100	38800	2	-
198	[Energy storage unit 4] [Battery pack1]Total discharge	RO	UINT32	kWh	100	38802	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
199	[Energy storage unit 4] [Battery pack1]]SOH Calibration Status	RO	UINT16	N/A	N/A	38804	1	
200	[Energy storage unit 4] [Battery pack2]]SN	RO	STRING	N/A	N/A	38805	10	-
201	[Energy storage unit 4] [Battery pack2]]Firmware version	RO	STRING	N/A	N/A	38815	15	-
202	[Energy storage unit 4] [Battery pack2]]Working status	RO	UINT16	N/A	N/A	38830	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
203	[Energy storage unit 4] [Battery pack2] SOC	RO	UINT16	%	10	38831	1	-
204	[Energy storage unit 4] [Battery pack2] Charge/Discharge power	RO	INT32	kW	1000	38833	2	-
205	[Energy storage unit 4] [Battery pack2] Voltage	RO	UINT16	V	10	38835	1	-
206	[Energy storage unit 4] [Battery pack2] Current	RO	INT16	A	10	38836	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
207	[Energy storage unit 4] [Battery pack2] Total charge	RO	UINT32	kWh	100	38837	2	-
208	[Energy storage unit 4] [Battery pack2] Total discharge	RO	UINT32	kWh	100	38839	2	-
209	[Energy storage unit 4] [Battery pack2] SOH Calibration Status	RO	UINT16	N/A	N/A	38841	1	
210	[Energy storage unit 4] [Battery pack2] SN	RO	STRING	N/A	N/A	38842	10	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
211	[Energy storage unit 4] [Battery pack2] Firmware version	RO	STRING	N/A	N/A	38852	15	-
212	[Energy storage unit 4] [Battery pack2] Working status	RO	UINT16	N/A	N/A	38867	1	-
213	[Energy storage unit 4] [Battery pack2] SOC	RO	UINT16	%	10	38868	1	-
214	[Energy storage unit 4] [Battery pack2] Charge/Discharge power	RO	INT32	kW	1000	38870	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
215	[Energy storage unit 4] [Battery pack2]Voltage	RO	UINT16	V	10	38872	1	-
216	[Energy storage unit 4] [Battery pack2]Current	RO	INT16	A	10	38873	1	-
217	[Energy storage unit 4] [Battery pack2]Total charge	RO	UINT32	kWh	100	38874	2	-
218	[Energy storage unit 4] [Battery pack2]Total discharge	RO	UINT32	kWh	100	38876	2	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
219	[Energy storage unit 3] [Battery pack2]]SOH Calibration Status	RO	UINT16	N/A	N/A	38878	1	
220	[Energy storage unit 4] [Battery pack1]]Maximum temperature	RO	INT16	℃	10	38879	1	-
221	[Energy storage unit 4] [Battery pack1]]Minimum temperature	RO	INT16	℃	10	38880	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
222	[Energy storage unit 4] [Battery pack2] Maximum temperature	RO	INT16	℃	10	38881	1	-
223	[Energy storage unit 4] [Battery pack2] Minimum temperature	RO	INT16	℃	10	38882	1	-
224	[Energy storage unit 4] [Battery pack3] Maximum temperature	RO	INT16	℃	10	38883	1	-

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
225	[Energy storage unit 4] [Battery pack3] Minimum temperature	RO	INT16	℃	10	38884	1	-
226	[Parallel system] Rechargeable power	RO	UINT32	kW	1000	38904	2	
227	[Parallel system] Dischargeable power	RO	UINT32	kW	1000	38906	2	
228	[Parallel system] Heating pre-requested power	RO	UINT16	W	1	38908	1	
229	[Parallel system] Dehumidification request power	RO	UINT16	W	1	38909	1	

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
230	[Parallel system] Battery charge / discharge request	RO	MLD/Bytes	N/A	N/A	38910	3	Byte0: request type. 0: no request (default) 1: charging first 2: emergency charging 3: forcible charging 4: discharge first 5: forced discharge Byte1 - Byte 4 Maximum charge / discharge power (unit: W, gain 1)

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
231	[Parallel system] Energy storage preheating needs time	RO	UINT16	min	N/A	38913	1	Value range: 0 to 1440
232	[Parallel system] Battery health check event	RO	ENUM16	N/A	N/A	38914	1	0: initial 1: start event 2: end event 3: reminder event
233	[Parallel system] Battery health check status	RO	ENUM16	N/A	N/A	38915	1	0: to be detected 1: automatic detection 2: manual detection 3: The detection is successful. 4: check failed

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
234	[Energy storage unit 1] Product mode	RW	UINT16	N/A	1	47000	1	0: None 1: LG-RESU 2: HUAWEI-LUNA 2000
235	[Energy storage] Time-of-use electricity price periods	RW	MULTIDATA	N/A	1	47028	41	For details, see 5.4
236	[Energy storage] Maximum charging power	RW	UINT32	W	1	47075	2	[0, Upper threshold]
237	[Energy storage] Maximum discharging power	RW	UINT32	W	1	47077	2	[0, Upper threshold]
238	[Energy storage] Charging cutoff capacity	RW	UINT16	%	10	47081	1	[90, 100] Default value: 100

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
239	[Energy storage] Discharge cutoff capacity	RW	UINT16	%	10	47082	1	[12,20] Default value: 15
240	[Energy storage] Forced charging and discharging period	RW	UINT16	mins	1	47083	1	[0,1440] The value is not stored.

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
241	[Energy storage]Forced charging and discharging power	RW	INT32	W	1	47084	2	[- "Maximum discharge power", "Maximum charge power"] Forced charge / discharge power ≤ Maximum charge / discharge power ≤ Rated charge / discharge power Do not store

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
242	[Energy storage]Working mode settings	RW	UINT16	N/A	1	47086	1	0:Adaptive(Fixed charge / discharge/ Maximise self consumption); 1:Fixed charge / discharge; 2:Maximise self consumption; 3:Time Of Use(LG); 4:Fully fed to grid; 5:Time Of Use(Luna)
243	[Energy storage]Charge from grid Function	RW	UINT16	N/A	1	47087	1	0: Disable 1: Enable

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
244	[Energy storage] Grid charge cutoff SOC	RW	UINT 16	%	10	47088	1	[20,100] Default: 50
245	[Energy storage unit 2] Product model	RW	UINT 16	N/A	1	47089	1	0: none 1: LG-RESU 2: HUAWEI-LUNA 2000
246	[Energy storage unit 3] Product mode	RW	UINT 16	N/A	1	47095	1	0: None 1: LG-RESU 2: HUAWEI-LUNA 2000
247	[Energy storage unit 4] Product mode	RW	UINT 16	N/A	1	47097	1	0: None 1: LG-RESU 2: HUAWEI-LUNA 2000
248	[Energy storage] Forcible charge / discharge	RW	UINT 16	N/A	1	47100	1	0: Stop 1: Charge 2: Discharge

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
249	[Energy storage] Target SOC	RW	UINT 16	%	10	47101	1	[0,100]
250	[Energy storage] Backup power SOC	RW	UINT 16	%	10	47102	1	Definition: Reserved energy storage capacity in backup mode Setting range: [0,100] Execution range: Luna: [0,100], Default value: 0
251	[Energy storage] Product model	RW	UINT 16	N/A	1	47106	1	0:none 1:LG-RESU 2:HUAWEI-LUNA 2000

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
252	[Energy storage unit 1] No.	RW	UINT16	N/A	1	47107	1	[0,65534] Default: 0. Which means no equipment.
253	[Energy storage unit 2] No.	RW	UINT16	N/A	1	47108	1	[0,65534] Default: 0. Which means no equipment.
254	[Energy storage unit 3] No.	RW	UINT16	N/A	1	47109	1	[0,65534] Default: 0. Which means no equipment.
255	[Energy storage unit 4] No.	RW	UINT16	N/A	1	47111	1	[0,65534] Default: 0. Which means no equipment.
256	Energy storage preheating	WO	ENUM16	N/A	N/A	47112	1	0: disabled 1: enabled

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
257	[Energy storage] Fixed charging and discharging periods	RW	MULTI-DATA	N/A	1	47200	41	For details, see 5.4
258	[Energy storage] Power of charge from grid	RW	UINT32	kW	1000	47242	2	[0, maximum power of charge from grid]
259	[Energy storage] Maximum power of charge from grid	RW	UINT32	kW	1000	47244	2	Default: 2000
260	[Energy storage] Forcible charge / discharge setting mode	RW	UINT16	N/A	1	47246	1	0: Duration

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
261	[Energy storage] Forcible charge power	RW	UINT 32	kW	1000	47247	2	[0,maximum charge power]
262	[Energy storage] Forcible discharge power	RW	UINT 32	kW	1000	47249	2	[0,maximum discharge power]
263	[Energy storage]Time of Use charging and discharging periods	RW	Bytes	N/A	1	47255	43	For details , see5.4
264	[Energy storage] Excess PV energy use in TOU	RW	UINT 16	N/A	1	47299	1	0: Fed to grid 1: Charge Note: Bound with the grid code. Japan: Fed to grid Other countries: Charge

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
265	Three-party scheduling energy storage charge and discharge power	RW	INT32	W	1	47321	2	> 0: charging; < 0: discharging; 0: not charging or discharging
266	Active power control mode	RW	UINT16	N/A	1	47415	1	0: Unlimited (default) 1: DI active scheduling 5: Zero power grid connection 6: Power-limited grid connection (kW) 7: Power-limited grid connection (%)

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
267	Maximum Feed Grid Power (kW)	RW	INT32	Kw	1000	47416	2	[-1000,Plant Capacity] default:t:0
268	Maximum Feed Grid Power (%)	RW	INT16	%	10	47418	1	[0,100] default:t:0

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
269	Charging and discharging remote control mode	RW	ENUM16	N/A	N/A	47589	1	0: near-end control 1: remote control-maximum self-use 2: remote control-full Internet access 3: remote control-Dong 4: Remote control-intelligent energy management 5: remote control-three-party scheduling

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
270	[Dongle] [Plant]maximum charge-from-grid power	RW	UINT 32	Kw	1000	47590	2	[0,30]
271	[Backup]Switch to off-grid	RW	UINT 16	N/A	1	47604	1	0: Switch from grid-tied to off-grid
272	[Backup]Voltage in independent operation	RW	UINT 16	V	1	47605	1	0: 101V 1: 202V
273	[Energy storage unit 1] [Battery pack1]No.	RW	UINT 16	N/A	N/A	47750	1	[0,65534] Default: 0. Which means no equipment.
274	[Energy storage unit 1] [Battery pack2]No.	RW	UINT 16	N/A	N/A	47751	1	[0,65534] Default: 0. Which means no equipment.

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
275	[Energy storage unit 1] [Battery pack3]No.	RW	UINT16	N/A	N/A	47752	1	[0,65534] Default: 0. Which means no equipment.
276	[Energy storage unit 2] [Battery pack1]No.	RW	UINT16	N/A	N/A	47753	1	[0,65534] Default: 0. Which means no equipment.
277	[Energy storage unit 2] [Battery pack2]No.	RW	UINT16	N/A	N/A	47754	1	[0,65534] Default: 0. Which means no equipment.
278	[Energy storage unit 2] [Battery pack3]No.	RW	UINT16	N/A	N/A	47755	1	[0,65534] Default: 0. Which means no equipment.
279	[Energy storage unit 3] [Battery pack1]No.	RW	UINT16	N/A	N/A	47836	1	[0,65534] Default: 0. Which means no equipment.

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity	Scope
280	[Energy storage unit 3] [Battery pack2]No.	RW	UINT16	N/A	N/A	47837	1	[0,65534] Default: 0. Which means no equipment.
281	[Energy storage unit 3] [Battery pack3]No.	RW	UINT16	N/A	N/A	47838	1	[0,65534] Default: 0. Which means no equipment.
282	[Energy storage unit 4] [Battery pack1]No.	RW	UINT16	N/A	N/A	47839	1	[0,65534] Default: 0. Which means no equipment.
283	[Energy storage unit 4] [Battery pack2]No.	RW	UINT16	N/A	N/A	47840	1	[0,65534] Default: 0. Which means no equipment.
284	[Energy storage unit 4] [Battery pack3]No.	RW	UINT16	N/A	N/A	47841	1	[0,65534] Default: 0. Which means no equipment.

NOTICE

[1]Two sets of energy storage devices at most can be connected to one inverter. If the inverter is connected to only one set of energy storage devices, the energy storage unit(ESU) corresponds to [Energy storage unit 1]. If two ESUs are connected, the second ESU corresponds to [Energy storage unit 2]. Currently, two sets of HUAWEI-LUNA2000 can be connected.

5 Customized Interfaces

5.1 Obtaining the System Information of Optimizers

Data synchronization mechanism: The host is driven to refresh the system information of optimizers by the change of the serial number (SN).

Synchronization process: For details, see [7.3.7.1 Uploading Files](#).

Data storage of the solar inverters: After the device search and positioning are complete, the record is updated. The record format is as follows:

File type: 0x45

Table 5-1 File format(V102)

Data	Length (Bytes)	Remarks
File version	4	V103
Feature data sequence number	2	
Length	2	
Reserved	1	The reserved byte 0 is defined as the status. bit0: inverter disconnection status (1=disconnected)
	3	
Number of optimizers	2	Total number, including the offline optimizers.
Feature data of optimizer 1	108	For details about the data domain definition, see the Optimizer Feature Data Domain Definition.

Data	Length (Bytes)	Remarks
Feature data of optimizer 2	108	
Feature data of optimizer...	108	
Feature data of optimizer N	108	

Table 5-2 Feature data unit format(V102)

Data	Length (Bytes)	Remarks
Optimizer address	2	RS485 address
Online status	2	0: offline 1: online 2: disconnected
String number	2	
Position in current string	2	relative positive connection starting point
SN	20	
Software version	30	
Alias	20	
Model	30	

Table 5-3 Record format(V101)

Data	Length (Byte)	Remarks
Format version	4	V101
SN	2	-
Length	2	-
Reserved	4	-
Number of optimizers	2	<i>n</i> , including the offline optimizers
Feature data of optimizer 1	78	-

Data	Length (Byte)	Remarks
Feature data of optimizer 2	78	-
...	...	-
Feature data of optimizer n	78	-

Table 5-4 Feature data format (V101)

Data	Length (Byte)	Remarks
Optimizer address	2	Logical communication address
Status	2	0: offline 1: online
String number	2	-
Relative position of the PV string	2	1: near DC wiring terminals of the solar inverters
SN	20	-
Software version	30	-
Alias	20	-

5.2 Obtaining Real-time Data of Optimizers

Data synchronization mechanism: fifteen-minute interval

Synchronization process: uploads the files and synchronizes data according to the time period; uploads the most recent data if there is no filter condition. For details, see [7.3.7.1 Uploading Files](#).

Data storage: stores real-time data at five-minute intervals.

File type: 0x44

Table 5-5 Record format

Data	Length (Byte)	Remarks
File version	4	V101
Reserved	8	-

Data	Length (Byte)	Remarks
Optimizer data unit 1	N	12 + 26 x Number of optimizers , For details about the definition of this unit, see the data unit format.
Optimizer data unit 2	N	-
...	-	-
Optimizer data unit <i>n</i>	N	<i>n</i> indicates the number of data records that meet the filter condition. Each piece of data contains all optimizer data for a time node.

Table 5-6 Data unit format (V101)

Data	Length (Byte)	Remarks
Time	4	Epoch seconds, local time
Reserved	4	-
Length	2	-
Number of optimizers	2	-
Real-time data of optimizer 1	26	For details about the definition of this unit, see the real-time data format.
Real-time data of optimizer 2	26	-
...	-	-
Real-time data of optimizer <i>n</i>	26	<i>n</i> is the number of optimizers.

Table 5-7 Real-time data format

Data	Length (Byte)	Remarks
Optimizer address	2	Logical communication address
Output power	2	Gain: 10 Unit: W

Data	Length (Byte)	Remarks
Voltage to ground	2	Gain: 10 Unit: V
Alarm	4	Bit00: input overvoltage Bit01: input undervoltage Bit02: output overvoltage Bit04: overtemperature Bit06: output short circuit Bit07: EEPROM fault Bit08: internal hardware fault Bit09: abnormal voltage to ground Bit 10: power-off due to heartbeat timeout Bit 11: fast shutdown Bit 12: request escape alarm Bit 13: version mismatch alarm Bit 16: input overvoltage Bit 17: overtemperature Bit 18: output short circuit Bit 19: internal hardware fault Bit 20: version mismatch alarm Bit 21: backfeed alarm Bit 22: abnormal output voltage Bit 23: upgrade failure Bit 31: alarm display selection, 1=Display bit 16 to bit 30 alarms, 0: Bits 0 to 15 are displayed.
Output voltage	2	Gain: 10 Unit: V
Output current	2	Gain: 100 Unit: A
Input voltage	2	Gain: 10 Unit: V
Input current	2	Gain: 100 Unit: A
Temperature	2	Gain: 10 Unit: °C

Data	Length (Byte)	Remarks
Running status	2	0: offline 1: standby 3: faulty 4: running 12: power-off
Accumulated energy yield	4	Gain: 1000 Unit: kWh

6 Interface Instructions

6.1 Alarm Information

Table 6-1 Alarm information

No.	Alarm	Bit	Alarm Name	Alarm ID	Level
1	Alarm 1	0	High String Input Voltage	2001	Major
2	Alarm 1	1	DC Arc Fault ^[1]	2002	Major
3	Alarm 1	2	String Reverse Connection	2011	Major
4	Alarm 1	3	String Current Backfeed	2012	Warning
5	Alarm 1	4	Abnormal String Power	2013	Warning
6	Alarm 1	5	AFCI Self-Check Fail. ^[1]	2021	Major
7	Alarm 1	6	Phase Wire Short-Circuited to PE	2031	Major
8	Alarm 1	7	Grid Loss	2032	Major
9	Alarm 1	8	Grid Undervoltage	2033	Major
10	Alarm 1	9	Grid Overvoltage	2034	Major

No.	Alarm	Bit	Alarm Name	Alarm ID	Level
11	Alarm 1	10	Grid Volt. Imbalance	2035	Major
12	Alarm 1	11	Grid Overfrequency	2036	Major
13	Alarm 1	12	Grid Underfrequency	2037	Major
14	Alarm 1	13	Unstable Grid Frequency	2038	Major
15	Alarm 1	14	Output Overcurrent	2039	Major
16	Alarm 1	15	Output DC Component Overhigh	2040	Major
17	Alarm 2	0	Abnormal Residual Current	2051	Major
18	Alarm 2	1	Abnormal Grounding	2061	Major
19	Alarm 2	2	Low Insulation Resistance	2062	Major
20	Alarm 2	3	Overtemperature	2063	Minor
21	Alarm 2	4	Device Fault	2064	Major
22	Alarm 2	5	Upgrade Failed or Version Mismatch	2065	Minor
23	Alarm 2	6	License Expired	2066	Warning
24	Alarm 2	7	Faulty Monitoring Unit	61440	Minor
25	Alarm 2	8	Faulty Power Collector ^[2]	2067	Major
26	Alarm 2	9	Battery abnormal	2068	Minor
27	Alarm 2	10	Active Islanding	2070	Major
28	Alarm 2	11	Passive Islanding	2071	Major

No.	Alarm	Bit	Alarm Name	Alarm ID	Level
29	Alarm 2	12	Transient AC Overvoltage	2072	Major
30	Alarm 2	13	Peripheral port short circuit ^[3]	2075	Warning
31	Alarm 2	14	Churn output overload ^[4]	2077	Major
32	Alarm 2	15	Abnormal PV module configuration	2080	Major
33	Alarm 3	0	Optimizer fault ^[5]	2081	Warning
34	Alarm 3	1	Built-in PID operation abnormal ^[6]	2085	Minor
35	Alarm 3	2	High input string voltage to ground.	2014	Major
36	Alarm 3	3	External Fan Abnormal	2086	Major
37	Alarm 3	4	Battery Reverse Connection ^[7]	2069	Major
38	Alarm 3	5	On-grid/Off-grid controller abnormal ^[4]	2082	Major
39	Alarm 3	6	PV String Loss	2015	Warning
40	Alarm 3	7	Internal Fan Abnormal	2087	Major
41	Alarm 3	8	DC Protection Unit Abnormal ^[8]	2088	Major

NOTICE

The preceding table lists the alarm information about Huawei solar inverters. Some alarms can be detected only after corresponding functional modules are configured.

 NOTE

- [1] AFCI functional unit
- [2] Power collector or power meter connected to the solar inverters
- [3] Detection of the external ports of the solar inverters that provide the 12 V power supply
- [4] This item can be detected when a built-in or external on-grid/off-grid functional unit is configured.
- [5] This item can be detected when optimizers are configured on the DC side.
- [6] This item can be detected when the solar inverters are configured with PID functional units.
- [7] This item can be detected when energy storage units (ESUs) are configured.
- [8] Some models have DC protection units.

6.2 Power Grid Scheduling

This section describes the curve configuration format and precautions for power grid scheduling by curve.

6.2.1 $\cos\phi$ -P/P_n Characteristic Curve

Table 6-2 $\cos\phi$ -P/P_n characteristic curve definition

Description	Data Type	Gain	Unit	Value Range
Number of points	U16	1	N/A	[2, 10]
P/P _n value at point 1	U16	10	%	[0, 100]
$\cos\phi$ value at point 1	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
P/P _n value at point 2	U16	10	%	[0, 100]
$\cos\phi$ value at point 2	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
P/P _n value at point 3	U16	10	%	[0, 100]
$\cos\phi$ value at point 3	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
P/P _n value at point 4	U16	10	%	[0, 100]
$\cos\phi$ value at point 4	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
P/P _n value at point 5	U16	10	%	[0, 100]
$\cos\phi$ value at point 5	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
P/P _n value at point 6	U16	10	%	[0, 100]
$\cos\phi$ value at point 6	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
P/P _n value at point 7	U16	10	%	[0,100]
$\cos\phi$ value at point 7	I16	1000	N/A	(-1,-0.8]U[0.8,1]

Description	Data Type	Gain	Unit	Value Range
P/P _n value at point 8	U16	10	%	[0, 100]
cos ϕ value at point 8	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
P/P _n value at point 9	U16	10	%	[0, 100]
cos ϕ value at point 9	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
P/P _n value at point 10	U16	10	%	[0, 100]
cos ϕ value at point 10	I16	1000	N/A	(-1, -0.8]U[0.8, 1]

6.2.2 Q-U Characteristic Curve

Table2 Q-U Characteristic Curve definition

Description	Data Type	Gain	Unit	Value Range
Number of points	U16	1	N/A	[2, 10]
U/U _n value at point 1	U16	10	%	[80, 136]
Q/S value at point 1	I16	1000	N/A	[-0.6, 0.6]
U/U _n value at point 2	U16	10	%	[80, 136]
Q/S value at point 2	I16	1000	N/A	[-0.6, 0.6]
U/U _n value at point 3	U16	10	%	[80, 136]
Q/S value at point 3	I16	1000	N/A	[-0.6, 0.6]
U/U _n value at point 4	U16	10	%	[80, 136]
Q/S value at point 4	I16	1000	N/A	[-0.6, 0.6]
U/U _n value at point 5	U16	10	%	[80, 136]
Q/S value at point 5	I16	1000	N/A	[-0.6, 0.6]
U/U _n value at point 6	U16	10	%	[80, 136]
Q/S value at point 6	I16	1000	N/A	[-0.6, 0.6]
U/U _n value at point 7	U16	10	%	[80, 136]
Q/S value at point 7	I16	1000	N/A	[-0.6, 0.6]
U/U _n value at point 8	U16	10	%	[80, 136]
Q/S value at point 8	I16	1000	N/A	[-0.6, 0.6]

Description	Data Type	Gain	Unit	Value Range
U/U _n value at point 9	U16	10	%	[80, 136]
Q/S value at point 9	I16	1000	N/A	[-0.6, 0.6]
U/U _n value at point 10	U16	10	%	[80, 136]
Q/S value at point 10	I16	1000	N/A	[-0.6, 0.6]

NOTICE

In Italian standards, this curve may be used together with the **Q-U characteristic curve mode**, **Q-U dispatch trigger power (%)**, and **Q-U power percentage to exit scheduling** parameters.

6.2.3 PF-U Characteristic Curve

Table3 PF-U Characteristic Curve definition

Description	Data Type	Gain	Unit	Value Range
Number of points	U16	1	N/A	[2, 10]
U/U _n value at point 1	U16	10	%	[80, 136]
PF value at point 1	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
U/U _n value at point 2	U16	10	%	[80, 136]
PF value at point 2	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
U/U _n value at point 3	U16	10	%	[80, 136]
PF value at point 3	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
U/U _n value at point 4	U16	10	%	[80, 136]
PF value at point 4	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
U/U _n value at point 5	U16	10	%	[80, 136]
PF value at point 5	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
U/U _n value at point 6	U16	10	%	[80, 136]
PF value at point 6	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
U/U _n value at point 7	U16	10	%	[80, 136]
PF value at point 7	I16	1000	N/A	(-1, -0.8]U[0.8, 1]

Description	Data Type	Gain	Unit	Value Range
U/U _n value at point 8	U16	10	%	[80, 136]
PF value at point 8	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
U/U _n value at point 9	U16	10	%	[80, 136]
PF value at point 9	I16	1000	N/A	(-1, -0.8]U[0.8, 1]
U/U _n value at point 10	U16	10	%	[80, 136]
PF value at point 10	I16	1000	N/A	(-1, -0.8]U[0.8, 1]

6.3 Grid Codes

Table 6-3 List of grid codes

No.	Standard	Applicable Country or Region
0	VDE-AR-N-4105	Germany
1	NB/T 32004	China
2	UTE C 15-712-1(A)	France
3	UTE C 15-712-1(B)	France
4	UTE C 15-712-1(C)	France
5	VDE 0126-1-1-BU	Bulgaria
6	VDE 0126-1-1-GR(A)	Greece
7	VDE 0126-1-1-GR(B)	Greece
8	BDEW-MV	Germany
9	G59-England	UK
10	G59-Scotland	UK
11	G83-England	UK
12	G83-Scotland	UK
13	CEI0-21	Italy
14	EN50438-CZ	Czech Republic
15	RD1699/661	Spain
16	RD1699/661-MV480	Spain

No.	Standard	Applicable Country or Region
17	EN50438-NL	Netherlands
18	C10/11	Belgium
19	AS4777	Australia
20	IEC61727	General
21	Custom (50 Hz)	Custom
22	Custom (60 Hz)	Custom
23	CEI0-16	Italy
24	CHINA-MV480	China
25	CHINA-MV	China
26	TAI-PEA	Thailand
27	TAI-MEA	Thailand
28	BDEW-MV480	Germany
29	Custom MV480 (50 Hz)	Custom
30	Custom MV480 (60 Hz)	Custom
31	G59-England-MV480	UK
32	IEC61727-MV480	General
33	UTE C 15-712-1-MV480	France
34	TAI-PEA-MV480	Thailand
35	TAI-MEA-MV480	Thailand
36	EN50438-DK-MV480	Denmark
37	Japan standard (50 Hz)	Japan
38	Japan standard (60 Hz)	Japan
39	EN50438-TR-MV480	Turkey
40	EN50438-TR	Turkey
41	C11/C10-MV480	Belgium
42	Philippines	Philippines
43	Philippines-MV480	Philippines
44	AS4777-MV480	Australia
45	NRS-097-2-1	South Africa

No.	Standard	Applicable Country or Region
46	NRS-097-2-1-MV480	South Africa
47	KOREA	South Korea
48	IEEE 1547-MV480	USA
49	IEC61727-60Hz	General
50	IEC61727-60Hz-MV480	General
51	CHINA_MV500	China
52	ANRE	Romania
53	ANRE-MV480	Romania
54	ELECTRIC RULE NO.21-MV480	California, USA
55	HECO-MV480	Hawaii, USA
56	PRC_024_Eastern-MV480	Eastern USA
57	PRC_024_Western-MV480	Western USA
58	PRC_024_Quebec-MV480	Quebec, Canada
59	PRC_024_ERCOT-MV480	Texas, USA
60	PO12.3-MV480	Spain
61	EN50438_IE-MV480	Ireland
62	EN50438_IE	Ireland
63	IEEE 1547a-MV480	USA
64	Japan standard (MV420-50 Hz)	Japan
65	Japan standard (MV420-60 Hz)	Japan
66	Japan standard (MV440-50 Hz)	Japan
67	Japan standard (MV440-60 Hz)	Japan
68	IEC61727-50Hz-MV500	General
70	CEI0-16-MV480	Italy
71	PO12.3	Spain

No.	Standard	Applicable Country or Region
72	Japan standard (MV400-50 Hz)	Japan
73	Japan standard (MV400-60 Hz)	Japan
74	CEI0-21-MV480	Italy
75	KOREA-MV480	South Korea
76	Egypt ETEC	Egypt
77	Egypt ETEC-MV480	Egypt
78	CHINA_MV800	China
79	IEEE 1547-MV600	USA
80	ELECTRIC RULE NO.21-MV600	California, USA
81	HECO-MV600	Hawaii, USA
82	PRC_024_Eastern-MV600	Eastern USA
83	PRC_024_Western-MV600	Western USA
84	PRC_024_Quebec-MV600	Quebec, Canada
85	PRC_024_ERCOT-MV600	Texas, USA
86	IEEE 1547a-MV600	USA
87	EN50549-LV	Ireland
88	EN50549-MV480	Ireland
89	Jordan-Transmission	Jordan
90	Jordan-Transmission-MV480	Jordan
91	NAMIBIA	Namibia
92	ABNT NBR 16149	Brazil
93	ABNT NBR 16149-MV480	Brazil
94	SA_RPPs	South Africa
95	SA_RPPs-MV480	South Africa
96	INDIA	India
97	INDIA-MV500	India

No.	Standard	Applicable Country or Region
98	ZAMBIA	Zambia
99	ZAMBIA-MV480	Zambia
100	Chile	Chile
101	Chile-MV480	Chile
102	CHINA-MV500-STD	China
103	CHINA-MV480-STD	China
104	Mexico-MV480	Mexico
105	Malaysian	Malaysia
106	Malaysian-MV480	Malaysia
107	KENYA_ETHIOPIA	East Africa
108	KENYA_ETHIOPIA-MV480	East Africa
109	G59-England-MV800	UK
110	NIGERIA	Nigeria
111	NIGERIA-MV480	Nigeria
112	DUBAI	Dubai
113	DUBAI-MV480	Dubai
114	Northern Ireland	Northern Ireland
115	Northern Ireland-MV480	Northern Ireland
116	Cameroon	Cameroon
117	Cameroon-MV480	Cameroon
118	Jordan-Distribution	Jordan
119	Jordan-Distribution-MV480	Jordan
120	Custom MV600-50 Hz	Custom
121	AS4777-MV800	Australia
122	INDIA-MV800	India
123	IEC61727-MV800	General
124	BDEW-MV800	Germany
125	ABNT NBR 16149-MV800	Brazil

No.	Standard	Applicable Country or Region
126	UTE C 15-712-1-MV800	France
127	Chile-MV800	Chile
128	Mexico-MV800	Mexico
129	EN50438-TR-MV800	Turkey
130	TAI-PEA-MV800	Thailand
131	Philippines-MV800	Philippines
132	Malaysian-MV800	Malaysia
133	NRS-097-2-1-MV800	South Africa
134	SA_RPPs-MV800	South Africa
135	Jordan-Transmission-MV800	Jordan
136	Jordan-Distribution-MV800	Jordan
137	Egypt ETEC-MV800	Egypt
138	DUBAI-MV800	Dubai
139	SAUDI-MV800	Saudi Arabia
140	EN50438_IE-MV800	Ireland
141	EN50549-MV800	Ireland
142	Northern Ireland-MV800	Northern Ireland
143	CEIO-21-MV800	Italy
144	IEC 61727-MV800-60Hz	General
145	NAMIBIA_MV480	Namibia
146	Japan (LV202-50 Hz)	Japan
147	Japan (LV202-60 Hz)	Japan
148	Pakistan-MV800	Pakistan
149	BRASIL-ANEEL-MV800	Brazil
150	Israel-MV800	Israel
151	CEIO-16-MV800	Italy
152	ZAMBIA-MV800	Zambia
153	KENYA_ETHIOPIA-MV800	East Africa

No.	Standard	Applicable Country or Region
154	NAMIBIA_MV800	Namibia
155	Cameroon-MV800	Cameroon
156	NIGERIA-MV800	Nigeria
157	ABUDHABI-MV800	Abu Dhabi
158	LEBANON	Lebanon
159	LEBANON-MV480	Lebanon
160	LEBANON-MV800	Lebanon
161	ARGENTINA-MV800	Argentina
162	ARGENTINA-MV500	Argentina
163	Jordan-Transmission-HV	Jordan
164	Jordan-Transmission-HV480	Jordan
165	Jordan-Transmission-HV800	Jordan
166	TUNISIA	Tunisia
167	TUNISIA-MV480	Tunisia
168	TUNISIA-MV800	Tunisia
169	JAMAICA-MV800	Jamaica
170	AUSTRALIA-NER	Australia
171	AUSTRALIA-NER-MV480	Australia
172	AUSTRALIA-NER-MV800	Australia
173	SAUDI	Saudi Arabia
174	SAUDI-MV480	Saudi Arabia
175	Ghana-MV480	Ghana
176	Israel	Israel
177	Israel-MV480	Israel
178	Chile-PMGD	Chile
179	Chile-PMGD-MV480	Chile
180	VDE-AR-N4120-HV	Germany
181	VDE-AR-N4120-HV480	Germany

No.	Standard	Applicable Country or Region
182	VDE-AR-N4120-HV800	Germany
183	IEEE 1547-MV800	USA
184	Nicaragua-MV800	Nicaragua
185	IEEE 1547a-MV800	USA
186	ELECTRIC RULE NO.21-MV800	California, USA
187	HECO-MV800	Hawaii, USA
188	PRC_024_Eastern-MV800	Eastern USA
189	PRC_024_Western-MV800	Western USA
190	PRC_024_Quebec-MV800	Quebec, Canada
191	PRC_024_ERCOT-MV800	Texas, USA
192	Custom-MV800-50Hz	Custom
193	RD1699/661-MV800	Spain
194	PO12.3-MV800	Spain
195	Mexico-MV600	Mexico
196	Vietnam-MV800	Vietnam
197	CHINA-LV220/380	China
198	SVG-LV	Dedicated
199	Vietnam	Vietnam
200	Vietnam-MV480	Vietnam
201	Chile-PMGD-MV800	Chile
202	Ghana-MV800	Ghana
203	TAIPOWER	Taiwan
204	TAIPOWER-MV480	Taiwan
205	TAIPOWER-MV800	Taiwan
206	IEEE 1547-LV208	USA
207	IEEE 1547-LV240	USA
208	IEEE 1547a-LV208	USA
209	IEEE 1547a-LV240	USA

No.	Standard	Applicable Country or Region
210	ELECTRIC RULE NO.21-LV208	USA
211	ELECTRIC RULE NO.21-LV240	USA
212	HECO-O+M+H-LV208	USA
213	HECO-O+M+H-LV240	USA
214	PRC_024_Eastern-LV208	USA
215	PRC_024_Eastern-LV240	USA
216	PRC_024_Western-LV208	USA
217	PRC_024_Western-LV240	USA
218	PRC_024_ERCOT-LV208	USA
219	PRC_024_ERCOT-LV240	USA
220	PRC_024_Quebec-LV208	USA
221	PRC_024_Quebec-LV240	USA
222	ARGENTINA-MV480	Argentina
223	Oman	Oman
224	Oman-MV480	Oman
225	Oman-MV800	Oman
226	Kuwait	Kuwait
227	Kuwait-MV480	Kuwait
228	Kuwait-MV800	Kuwait
229	Bangladesh	Bangladesh
230	Bangladesh-MV480	Bangladesh
231	Bangladesh-MV800	Bangladesh
232	Chile-Net_Billing	Chile
233	EN50438-NL-MV480	Netherlands
234	Bahrain	Bahrain
235	Bahrain-MV480	Bahrain
236	Bahrain-MV800	Bahrain
238	Japan-MV550-50Hz	Japan

No.	Standard	Applicable Country or Region
239	Japan-MV550-60Hz	Japan
241	ARGENTINA	Argentina
242	KAZAKHSTAN-MV800	Kazakhstan
243	Mauritius	Mauritius
244	Mauritius-MV480	Mauritius
245	Mauritius-MV800	Mauritius
246	Oman-PDO-MV800	Oman
247	EN50438-SE	Sweden
248	TAI-MEA-MV800	Thailand
249	Pakistan	Pakistan
250	Pakistan-MV480	Pakistan
251	PORTUGAL-MV800	Portugal
252	HECO-L+M-LV208	USA
253	HECO-L+M-LV240	USA
254	C10/11-MV800	Belgium
255	Austria	Austria
256	Austria-MV480	Austria
257	G98	UK
258	G99-TYPEA-LV	UK
259	G99-TYPEB-LV	UK
260	G99-TYPEB-HV	UK
261	G99-TYPEB-HV-MV480	UK
262	G99-TYPEB-HV-MV800	UK
263	G99-TYPEC-HV-MV800	UK
264	G99-TYPED-MV800	UK
265	G99-TYPEA-HV	UK
266	CEA-MV800	India
267	EN50549-MV400	Europe
268	VDE-AR-N4110	Germany

No.	Standard	Applicable Country or Region
269	VDE-AR-N4110-MV480	Germany
270	VDE-AR-N4110-MV800	Germany
271	Panama-MV800	Panama
272	North Macedonia-MV800	Nprth Macedonia
273	NTS	Spain
274	NTS-MV480	Spain
275	NTS-MV800	Spain
275	NTS-MV800	西班牙
276	AS4777-WP	澳大利亚
277	CEA	印度
278	CEA-MV480	印度
279	SINGAPORE	新加坡
280	SINGAPORE-MV480	新加坡
281	SINGAPORE-MV800	新加坡
282	HONGKONG	香港
283	HONGKONG-MV480	香港
284	C10/11-MV400	比利时
285	KOREA-MV800	韩国
286	Cambodia	柬埔寨
287	Cambodia-MV480	柬埔寨
288	Cambodia-MV800	柬埔寨
289	EN50549-SE	瑞典
290	GREG030	哥伦比亚
291	GREG030-MV440	哥伦比亚
292	GREG030-MV480	哥伦比亚
293	GREG060-MV800	哥伦比亚
294	PERU-MV800	秘鲁
295	PORTUGAL	葡萄牙
296	PORTUGAL-MV480	葡萄牙

No.	Standard	Applicable Country or Region
297	AS4777-ACT	澳大利亚
298	AS4777-NSW-ESS	澳大利亚
299	AS4777-NSW-AG	澳大利亚
300	AS4777-QLD	澳大利亚
301	AS4777-SA	澳大利亚
302	AS4777-VIC	澳大利亚
303	EN50549-PL	波兰
304	Island-Grid	通用
305	TAIPOWER-LV220	中国台湾
306	Mexico-LV220	墨西哥
307	ABNT NBR 16149-LV127	巴西
308	Philippines-LV220-50Hz	菲律宾
309	Philippines-LV220-60Hz	菲律宾
310	Israel-HV800	以色列
311	DENMARK-EN50549-DK1-LV230	丹麦
312	DENMARK-EN50549-DK2-LV230	丹麦
313	SWITZERLAND-NA/EEA:2020-LV230	瑞士
314	Japan-LV202-50Hz	日本
315	Japan-LV202-60Hz	日本
316	AUSTRIA-MV800	奥地利
317	AUSTRIA-HV800	奥地利
318	POLAND-EN50549-MV800	波兰
319	IRELAND-EN50549-LV230	爱尔兰
320	IRELAND-EN50549-MV480	爱尔兰
321	IRELAND-EN50549-MV800	爱尔兰

No.	Standard	Applicable Country or Region
322	DENMARK-EN50549-MV800	丹麦
323	FRANCE-RTE-MV800	法国
324	AUSTRALIA-AS4777_A-LV230	澳大利亚
325	AUSTRALIA-AS4777_B-LV230	澳大利亚
326	AUSTRALIA-AS4777_C-LV230	澳大利亚
327	AUSTRALIA-AS4777_NZ-LV230	澳大利亚
328	AUSTRALIA-AS4777_A-MV800	澳大利亚
329	CHINA-GBT34120-MV800	中国
330	UZBEKISTAN-MV800	乌兹别克斯坦
331	CHINA-GBT34120-MV380	中国
332	N/A	N/A
333	CHINA-MV690	中国
334	IEC61727-MV720	印度
335	INDIA-CEA-MV720	印度
336	SA-NRS-097-MV720	南非
337	SA-RPPS-MV720	南非
338	SAUDI-MV720	沙特
339	UZBEKISTAN-MV720	乌兹别克斯坦
340	EGYPT-ETEC-MV720	埃及
341	KAZAKHSTAN-MV690	哈萨克斯坦
342	CHINA-CUSTOM-MV800	中国
343	JAPAN-MV200-50Hz	日本
344	JAPAN-MV210-50Hz	日本
345	JAPAN-MV230-50Hz	日本
346	JAPAN-MV250-50Hz	日本

No.	Standard	Applicable Country or Region
347	JAPAN-MV200-60Hz	日本
348	JAPAN-MV210-60Hz	日本
349	JAPAN-MV230-60Hz	日本
350	JAPAN-MV250-60Hz	日本
351	CZECH-EN50549-LV230	捷克
352	CZECH-EN50549-MV480	捷克
353	CZECH-EN50549-MV800	捷克
354	CHINA_MV315	中国
355	KOREA-MV690-60Hz	韩国
356	ANRE-MV800	罗马尼亚
357	FINLAND-EN50549-LV230	芬兰
358	AUSTRIA-MV400-50Hz	奥地利
359	SAUDI-LV220	沙特
360	CHINA-MV285	中国
361	CHINA-MV360	中国
362	JAPAN-MV270-50Hz	日本
363	JAPAN-MV330-50Hz	日本
364	JAPAN-MV380-50Hz	日本
365	JAPAN-MV270-60Hz	日本
366	JAPAN-MV330-60Hz	日本
367	JAPAN-MV380-60Hz	日本
368	LITHUANIA-EN50549-MV800	立陶宛
369	FINLAND-EN50549-MV400	芬兰
370	FINLAND-EN50549-MV480	芬兰
371	FINLAND-EN50549-MV800	芬兰
372	EN50549-SE-MV400	瑞典

No.	Standard	Applicable Country or Region
373	EN50549-SE-MV480	瑞典
374	EN50549-SE-MV800	瑞典
375	CEPM	多米尼加
376	CEPM-MV480	多米尼加
377	CEPM-MV800	多米尼加
378	SA-BESF-L	南非
379	SA-BESF-L-MV480	南非
380	SA-BESF-L-MV800	南非
381	SA-BESF-H	南非
382	SA-BESF-H-MV480	南非
383	SA-BESF-H-MV800	南非
384	BRAZIL-P140-LV220	巴西
385	NEW CALEDONIA-LV230	新喀里多尼亚
386	Israel-MV400	以色列
387	ANRE-TYPEB	罗马尼亚
388	ANRE-TYPEB-MV480	罗马尼亚
389	AUSTRIA- NER_TYPEB_LV400	奥地利
390	AUSTRIA- NER_TYPEB_LV480	奥地利
391	AUSTRIA- NER_TYPEB_MV400	奥地利
392	AUSTRIA- NER_TYPEB_MV480	奥地利
393	IRAQ-MV800	伊拉克
394	MOROCCO-MV800	摩洛哥
395	ALGERIA-MV800	阿尔及利亚
396	CHINA-GBT19964- MV800	中国
397	CHINA-GBT29319- MV800	中国
398	SENEGAL	塞内加尔

No.	Standard	Applicable Country or Region
399	SENEGAL-MV480	塞内加尔
400	SENEGAL-MV800	塞内加尔
401	NC2022	新喀里多尼亚
402	NORWAY_EN50549_LV230	挪威

NOTICE

Set the grid code based on local laws and regulations.

6.4 Energy Storage Specifications

Table 6-4 Format description of parameters for time-of-use electricity price periods

Description	Data Type	Gain	Unit	Value Range
Number of periods	U16	1	N/A	[0, 10]
Start time of period 1	U16	1	min	[0, 1440]. The value is the elapsed minutes since 00:00 a.m. The start time should be earlier than the end time.
End time of period 1	U16	1	min	[0, 1440]. The value is the elapsed minutes since 00:00 a.m. The start time should be earlier than the end time.
Electricity price in period 1	U32	1000	N/A	N/A
Start time of period 2	U16	1	min	[0, 1440]. The value is the elapsed minutes since 00:00 a.m. The start time should be earlier than the end time.

Description	Data Type	Gain	Unit	Value Range
End time of period 2	U16	1	min	[0, 1440]. The value is the elapsed minutes since 00:00 a.m. The start time should be earlier than the end time.
Electricity price in period 2	U32	1000	N/A	N/A
...	...	...	...	...
Start time of period 10	U16	1	min	[0, 1440]. The value is the elapsed minutes since 00:00 a.m. The start time should be earlier than the end time.
End time of period 10	U16	1	min	[0, 1440]. The value is the elapsed minutes since 00:00 a.m. The start time should be earlier than the end time.
Electricity price in period 10	U32	1000	N/A	N/A

Table 6-5 Format description of parameters for fixed charging and discharging periods

Description	Data Type	Gain	Unit	Value Range
Number of periods	U16	1	N/A	[0, 10]
Start time of period 1	U16	1	min	[0, 1440]. The value is the elapsed minutes since 00:00 a.m. The start time should be earlier than the end time.
End time of period 1	U16	1	min	[0, 1440]. The value is the elapsed minutes since 00:00 a.m. The start time should be earlier than the end time.

Description	Data Type	Gain	Unit	Value Range
Charging and discharging power in period 1	I32	1	W	[Discharging power limit, Charging power limit]. For details, see the description of the supported model.
Start time of period 2	U16	1	min	[0, 1440]. The value is the elapsed minutes since 00:00 a.m. The start time should be earlier than the end time.
End time of period 2	U16	1	min	[0, 1440]. The value is the elapsed minutes since 00:00 a.m. The start time should be earlier than the end time.
Charging and discharging power in period 2	I32	1	W	[Discharging power limit, Charging power limit]. For details, see the description of the supported model.
...	...	...	...	...
Start time of period 10	U16	1	min	[0, 1440]. The value is the elapsed minutes since 00:00 a.m. The start time should be earlier than the end time.
End time of period 10	U16	1	min	[0, 1440]. The value is the elapsed minutes since 00:00 a.m. The start time should be earlier than the end time.
Charging and discharging power in period 10	I32	1	W	[Discharging power limit, Charging power limit]. For details, see the description of the supported model.

7 Overview of the Communications Protocol


7.1 Physical Layer

Huawei solar inverters provide Modbus communication based on physical media such as MBUS, RS485, WLAN, FE, and 4G. MBUS and RS485 comply with the Modbus-RTU format. The communication through the WLAN, FE, and 4G media is based on the TCP link and complies with the Modbus-TCP format.

7.2 Data Link Layer


The following figure shows the generic frame structure of the Modbus protocol.

Figure 7-1 Modbus generic frame format

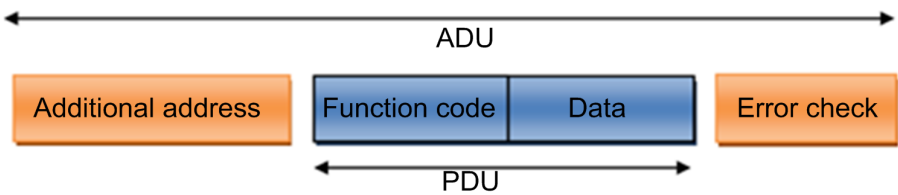

7.2.1 Modbus-RTU

Figure 7-2 Modbus-RTU frame format

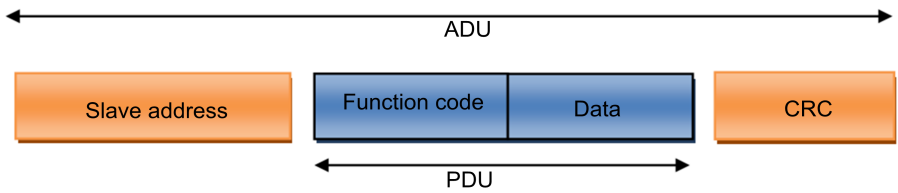



```
0x62, 0x66, 0xA6, 0xA7, 0x67, 0xA5, 0x65, 0x64, 0xA4, 0x6C, 0xAC, 0xAD, 0x6D, 0xAF, 0x6F,  
0x6E, 0xAE, 0xAA, 0x6A, 0x6B, 0xAB, 0x69, 0xA9, 0xA8, 0x68, 0x78, 0xB8, 0xB9, 0x79, 0xBB,  
0x7B, 0x7A, 0xBA, 0xBE, 0x7E, 0x7F, 0xBF, 0x7D, 0xBD, 0xBC, 0x7C, 0xB4, 0x74, 0x75, 0xB5,  
0x77, 0xB7, 0xB6, 0x76, 0x72, 0xB2, 0xB3, 0x73, 0xB1, 0x71, 0x70, 0xB0, 0x50, 0x90, 0x91,  
0x51, 0x93, 0x53, 0x52, 0x92, 0x96, 0x56, 0x57, 0x97, 0x55, 0x95, 0x94, 0x54, 0x9C, 0x5C,  
0x5D, 0x9D, 0x5F, 0x9F, 0x9E, 0x5E, 0x5A, 0x9A, 0x9B, 0x5B, 0x99, 0x59, 0x58, 0x98, 0x88,  
0x48, 0x49, 0x89, 0x4B, 0x8B, 0x8A, 0x4A, 0x4E, 0x8E, 0x8F, 0x4F, 0x8D, 0x4D, 0x4C, 0x8C,  
0x44, 0x84, 0x85, 0x45, 0x87, 0x47, 0x46, 0x86, 0x82, 0x42, 0x43, 0x83, 0x41, 0x81, 0x80, 0x40  
};  
unsigned short CRC16 ( puchMsg, usDataLen ) /* The function returns the CRC as a unsigned short type */  
unsigned char *puchMsg ; /* message to calculate CRC upon */  
unsigned short usDataLen ; /* quantity of bytes in message */  
{  
    unsigned char uchCRCHi = 0xFF ; /* high byte of CRC initialized */  
    unsigned char uchCRCLo = 0xFF ; /* low byte of CRC initialized */  
    unsigned ulIndex ; /* will index into CRC lookup table */  
    while (usDataLen--) /* pass through message buffer */  
    {  
        ulIndex = uchCRCLo ^ *puchMsg++ ; /* calculate the CRC */  
        uchCRCLo = uchCRCHi ^ auchCRCHi[ulIndex] ;  
        uchCRCHi = auchCRCLo[ulIndex] ;  
    }  
    return (uchCRCHi << 8 | uchCRCLo) ;  
}
```

Code source: *MODBUS over Serial Line Specification and Implementation Guide V1.02*

7.2.2 Modbus-TCP

Figure 7-3 Modbus-TCP frame format

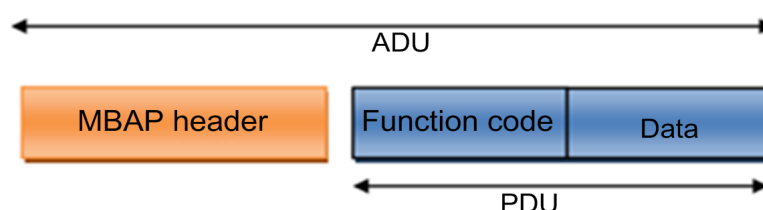

7.2.2.1 ADU Length

The recommended frame length is 260 bytes based on the standard. When some extended functions are applied, the data service provider may extend the ADU to a proper length based on the resources it possesses, to improve network transmission efficiency. The ADU length is indicated by the length field in the MBAP packet header.

7.2.2.2 MBAP Packet Header

If Modbus is applied to TCP/IP, a dedicated MBAP packet header (Modbus application protocol packet header) is used to identify the Modbus ADU. The Modbus packet header consists of four fields and seven bytes, which are defined as follows.


Table 7-2 MBAP definition

Data Field	Length (Byte)	Description	Client	Server
Transmission identifier	2	Matching identifier between a request frame and a response frame	Assigned by the client; better be unique for each data frame	The identifier of the response frame from the server must be consistent with that of the request frame.
Protocol type	2	0 = Modbus protocol	Assigned by the client; 0 by default	The identifier of the response frame from the server must be consistent with that of the request frame.
Data length	2	Follow-up data length	Assigned by the client based on the actual data frame	Assigned by the server based on the actual frame length
Logical device ID	1	0	Assigned by the client based on the actual data frame request	The identifier of the response frame from the server must be consistent with that of the request frame.

7.2.2.3 Communications Address

Based on the TCP communications host, unit 0 is used by default to access the directly connected slave node, and other addresses are used to access the downstream devices of the slave node. The default address of the slave node is 0. The address is adjustable.

Figure 7-4 Communications address of the three-layer object structure

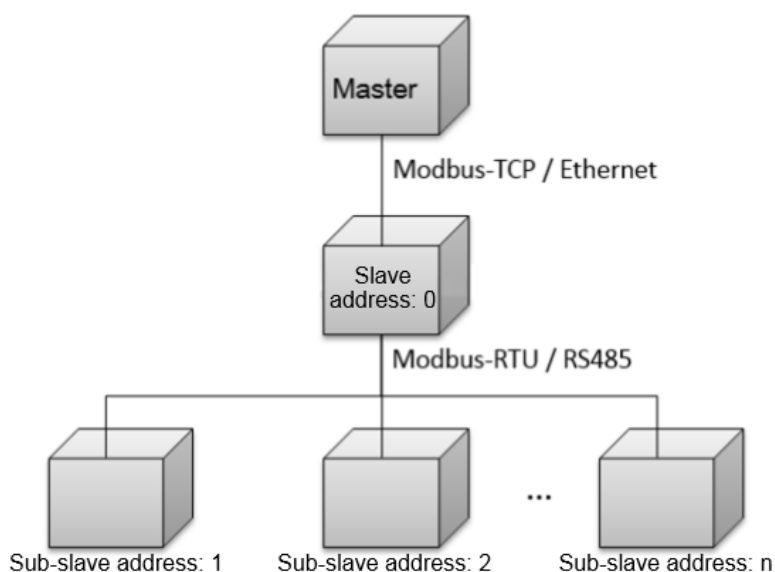

7.2.2.4 TCP Port

In a local area network or VPN environment, the master node may actively initiate TCP socket link establishment to the slave node. The master node can use the 502 port to request data services from the slave node.


In a non-VPN environment across the public network, the device deployed on the internal network needs to initiate TCP socket link establishment to the master node exposed on the public network. In this case, you need to preset the fixed access port number of the master node on the slave node. To ensure security and reduce traffic, the master node must provide at least one encrypted port and one non-encrypted port.

7.2.2.5 TCP Link Establishment Process

This section focuses on the cross-public network application.

The following figure shows the process of connecting a slave node.

Figure 7-5 Process of establishing a secure TCP connection

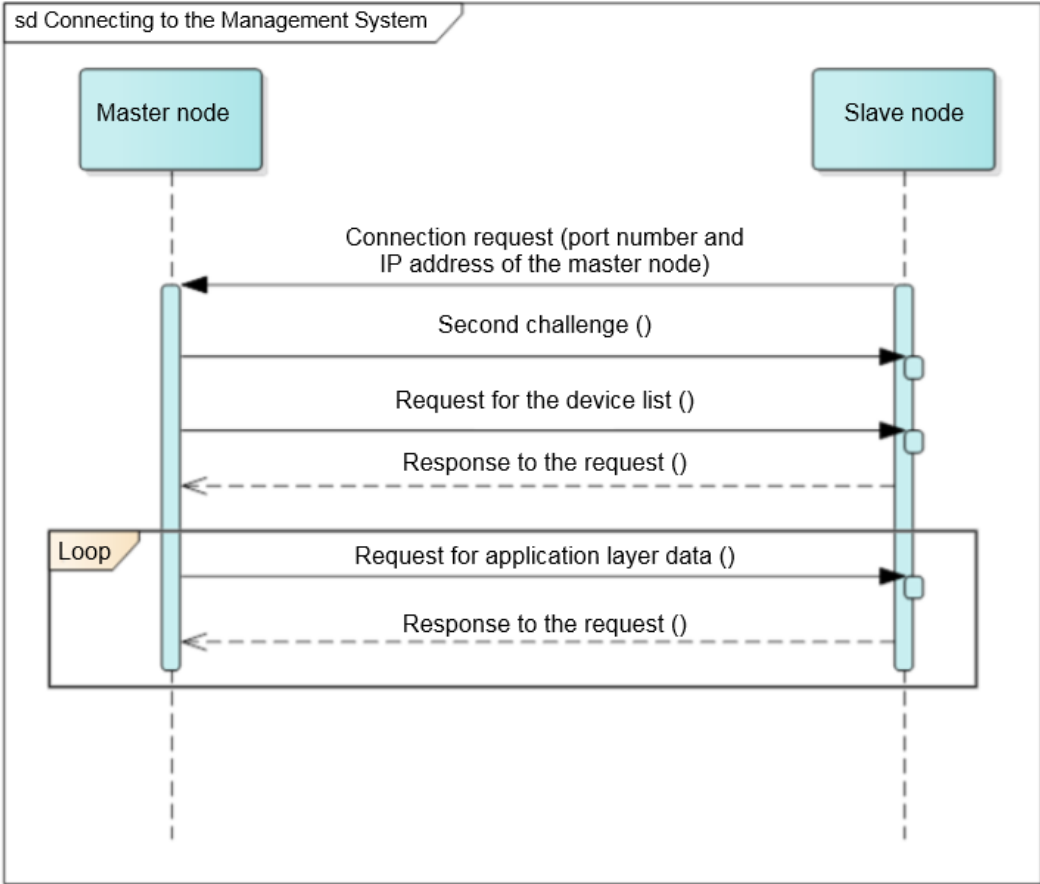

7.3 Application Layer

7.3.1 Function Code List

Table 7-3 Function code list

Function Code	Meaning	Remarks
0x03	Read registers.	Continuously reads a single register or multiple registers.
0x06	Write a single register.	Writes into a single register.
0x10	Write multiple registers.	Continuously writes into multiple registers.

7.3.2 Exception Code List

The exception codes must be unique for each network element (NE) type. The names and descriptions should be provided in both the Chinese and English NE

interface document. Different versions of the same NE type must be backward compatible. Exception codes in use cannot be assigned to other exceptions.

Table 7-4 Exception codes returned by an NE (0x00–0x8F are for common exception codes)

Code	Name	Description
0x01	Illegal function	The function code received in the query is not an allowable action for the server (or slave node). This may be because the function code is only applicable to newer devices, and was not implemented in the unit selected. It could also indicate that the server (or slave node) is in the wrong state to process a request of this type, for example because it is not configured and is being asked to return register values.
0x02	Illegal data address	The data address received in the query is not an allowable address for the server. More specifically, the combination of reference number and transfer length is invalid. For a controller with 100 registers, the PDU addresses the first register as 0, and the last one as 99. If a request is submitted with a starting register address of 96 and a quantity of registers of 4, then this request will successfully operate (address-wise at least) on registers 96, 97, 98, 99. If a request is submitted with a starting register address of 96 and a quantity of registers of 5, then this request will fail with Exception Code 0x02 "Illegal Data Address" since it attempts to operate on registers 96, 97, 98, 99 and 100, and there is no register with address 100.
0x03	Illegal data value	The value contained in the query data field is not an allowable value for the server (or slave). The value indicates a fault in the structure of the remainder of a complex request, such as an incorrectly implied length. It specifically does not mean that a data item submitted for storage in a register has a value outside the expectation of the application program since the Modbus protocol is unaware of the significance of any particular value of any particular register.
0x04	Slave node failure	An error occurred while the server was attempting to perform the requested action.
0x06	Slave device busy	The server cannot accept a Modbus request PDU. A client application determines whether and when to resend the request.

Code	Name	Description
0x80	No permission	An operation is not allowed because of a permission authentication failure or permission expiration.

7.3.3 Reading Registers (0x03)

7.3.3.1 Frame Format of a Request from a Master Node

Data Field	Length (Byte)	Description
Function code	1	0x03
Register start address	2	0x0000–0xFFFF
Number of registers	2	1–125

7.3.3.2 Frame Format of a Normal Response from a Slave Node

Data Field	Length (Byte)	Description
Function code	1	0x03
Number of bytes	1	2 x N
Register value	2 x N	N/A

N refers to the number of registers.

7.3.3.3 Frame Format of an Abnormal Response from a Slave Node

Data Field	Length (Byte)	Description
Function code	1	0x83
Exception code	1	See 7.3.2 Exception Code List .

7.3.3.4 Examples

This section takes the Modbus-TCP communications frames as an example. The differences between Modbus-RTU and Modbus-TCP lie in the additional address field and the CRC. Pay attention to the differences when using the Modbus-RTU frames. This also works for the follow-up examples.

The master node sends a query request (register address: 32306/0X7E32) to the slave node (logical device ID: 00).

Description		Frame Data
MBAP header	Protocol identifier	00
		01
	Protocol type	00
		00
	Data length	00
		06
	Logical device ID	00
Function code		03
Data	Register address	7E
		32
	Number of registers	00
		02

Normal response from the slave node

Description		Frame Data
MBAP header	Protocol identifier	00
		01
	Protocol type	00
		00
	Data length	00
		07
	Logical device ID	00
Function code		03
Data	Number of bytes	04
	Register data	00
		00
		00
		01

Abnormal response from the slave node

Description		Frame data
MBAP header	Protocol identifier	00
		01
	Protocol type	00
		00
	Data length	00
		03
	Logical device ID	00
Function code		83
Data	Error code	03

7.3.4 Writing a Single Register (0x06)

7.3.4.1 Frame Format of a Request from a Master Node

Data Field	Length (Byte)	Description
Function code	1	0x06
Register address	2	0x0000–0xFFFF
Register value	2	0x0000–0xFFFF

7.3.4.2 Frame Format of a Normal Response from a Slave Node

Data Field	Length (Byte)	Description
Function code	1	0x06
Register address	2	0x0000–0xFFFF
Register value	2	0x0000–0xFFFF

7.3.4.3 Frame Format of an Abnormal Response from a Slave Node

Data Field	Length (Byte)	Description
Function code	1	0x86

Data Field	Length (Byte)	Description
Exception code	1	See 7.3.2 Exception Code List .

7.3.4.4 Examples

A master node sends a command (register address: 40200/0X9D08) to a slave node (address: 00).

Description		Frame data
MBAP header	Protocol identifier	00
		01
	Protocol type	00
		00
	Data length	00
		06
	Logical device ID	00
Function code		06
Data	Register address	9D
		08
	Register data	00
		00

Normal response from the slave node

Description		Frame Data
MBAP header	Protocol identifier	00
		01
	Protocol type	00
		00
	Data length	00
		06
	Logical device ID	00

Description		Frame Data
Function code		06
Data	Register address	9D
		08
	Register data	00
		00

Abnormal response from the slave node

Description		Frame Data
MBAP header	Protocol identifier	00
		01
	Protocol type	00
		00
	Data length	00
		03
	Logical device ID	00
Function code		86
Data	Error code	04

7.3.5 Writing Multiple Registers (0x10)

7.3.5.1 Frame Format of a Request from a Master Node

Data Field	Length (Byte)	Description
Function code	1	0x10
Register start address	2	0x0000–0xFFFF
Number of registers	2	0x0000–0x007b
Number of bytes	1	2 x N
Register value	2 x N	Value

N refers to the number of registers.

7.3.5.2 Frame Format of a Normal Response from a Slave Node

Data Field	Length (Byte)	Description
Function code	1	0x10
Register address	2	0x0000–0xFFFF
Number of registers	2	0x0000–0x007b

7.3.5.3 Frame Format of an Abnormal Response from a Slave Node

Data Field	Length (Byte)	Description
Function code	1	0x90
Exception code	1	See 7.3.2 Exception Code List .

7.3.5.4 Examples

The master node sets the register address 40118/0X9CB6 to 2 and the register address 40119/0X9CB7 to 50 for the slave node (address: 00). The request frame format is as follows.

Description		Frame Data
MBAP header	Protocol identifier	00
		01
	Protocol type	00
		00
	Data length	00
		0B
	Logical device ID	00
Function code		10
Data	Register address	9C
		B6
	Number of registers	00
		02
	Number of bytes	04
	Register data	00

Description		Frame Data
		02
		00
		32

Normal response from the slave node

Description		Frame Data
MBAP header	Protocol identifier	00
		01
	Protocol type	00
		00
	Data length	00
		06
	Logical device ID	00
Function code		10
Data	Register address	9C
		B6
	Number of registers	00
		02

Abnormal response from the slave node

Description		Frame Data
MBAP header	Protocol identifier	00
		01
	Protocol type	00
		00
	Data length	00
		03
	Logical device ID	00
Function code		90

Description		Frame Data
Data	Error code	04

7.3.6 Reading Device Identifiers (0x2B)

This command code allows reading identifiers and added packets that are relevant to the physical and function description of the remote devices.

Simulate the interface of the read device identifier as an address space. This address space consists of a set of addressable data elements. The data elements are objects to be read, and the object IDs determine these data elements.

A data element consists of three objects:

1. Basic device identifier: All objects of this type are mandatory, such as the vendor name, product code, and revision version.
2. Normal device identifier: Except basic data objects, the device provides additional and optional identifiers and data object description. Define all types of objects according to definitions in the standard, but the execution of this type of objects is optional.
3. Extended device identifier: In addition to the normal data objects, the device provides additional and optional identifiers and special data object description. All the data is related to the device.

Table 7-5 Reading device identifiers

Object ID	Object Name or Description	Type	Mandatory or Optional (M/O)	Type
0x00	Manufacturer name	ASCII character string	M	Basic
0x01	Product code	ASCII character string	M	
0x02	Main revision version	ASCII character string	M	
0x03–0x7F	-	-	-	Normal
0x80–0xFF	-	-	-	Expansion

7.3.6.1 Command for Querying Device Identifiers

Table 7-6 Request frame format

Data Field	Length (Byte)	Description
Function code	1	0x2B
MEI type	1	0x0E
ReadDevId code	1	01
Object ID	1	0x00

Table 7-7 Frame format for a normal response

Data Field			Length (Byte)	Description
Function code			1	0x2B
MEI type			1	0x0E
ReadDevId code			1	01
Consistency level			1	01
More			1	-
Next object ID			1	-
Number of objects			1	-
Object list	First object	Object ID	1	0x00
		Object length	1	N
		Object value	N	-
	...	...	...	...

Table 7-8 Object list

Object ID	Object Name or Description	Description	Type
0x00	Manufacturer name	HUAWEI	Basic
0x01	Product code	SUN2000	
0x02	Main revision version	ASCII character string, software version	

Table 7-9 Frame format for an abnormal response

Data Field	Length (Byte)	Description
Function code	1	0xAB
Exception code	1	See 7.3.2 Exception Code List .

7.3.6.2 Command for Querying a Device List

Table 7-10 Request frame format

Data Field	Length (Byte)	Description
Function code	1	0x2B
MEI type	1	0x0E
ReadDevId code	1	03
Object ID	1 byte	0x87

Table 7-11 Frame format for a normal response

Data Field			Length (Byte)	Description
Function code			1	0x2B
MEI type			1	0x0E
ReadDevId code			1	03
Consistency level			1	03
More			1	-
Next object ID			1	-
Number of objects			1	-
Object list	First object	Object ID	1	0x87
		Object length	1	N
		Object value	N	-
	...	...	...	...

Table 7-12 Object list

Object ID	Object Name	Type	Description
0x80–0x86	Reserved	--	Returns a null object with a length of 0.
0x87	Number of devices	int	Returns the number of devices connected to the RS485 address.
0x88	Description about the first device	ASCII character string See the device description definitions.	Returns only description about the first device if a NE allows only one device to be connected to each RS485 address.
0x8A	Description about the second device	-	-
-	-	-	-
0xFF	Description about the 120th device	-	-

7.3.6.3 Device Description Definition

Each device description consists of all "attribute=value" character strings.

"Attribute ID=%s;attribute ID=%s;... attribute ID=%s"

For example: "1=SUN2000MA-XXKTL;2=V100R001C00SPC100;3=P1.0-D5.0;4=123232323;5=1;6=1.1"

Table 7-13 Attribute definition

Attribute ID	Name	Type	Description
1	Device model	ASCII character string	SUN2000
2	Device software version	ASCII character string	-
3	Port protocol version	ASCII character string	See the interface protocol version definitions.

Attribute ID	Name	Type	Description
4	ESN	ASCII character string	-
5	Device ID	int	0, 1, 2, 3...(assigned by NEs; 0 indicates the master device into which the Modbus card is inserted)
6	Feature version	ASCII character string	-

Table 7-14 Frame format for an abnormal response


Data Field	Length (Byte)	Description
Function code	1	0xAB
Exception code	1	See 7.3.2 Exception Code List .

7.3.7 Huawei-defined Functions (0x41)

7.3.7.1 Uploading Files

Uploading files means uploading them by stream data from a slave node to a master node. The following figure shows the file uploading process.

Figure 7-6 File uploading process

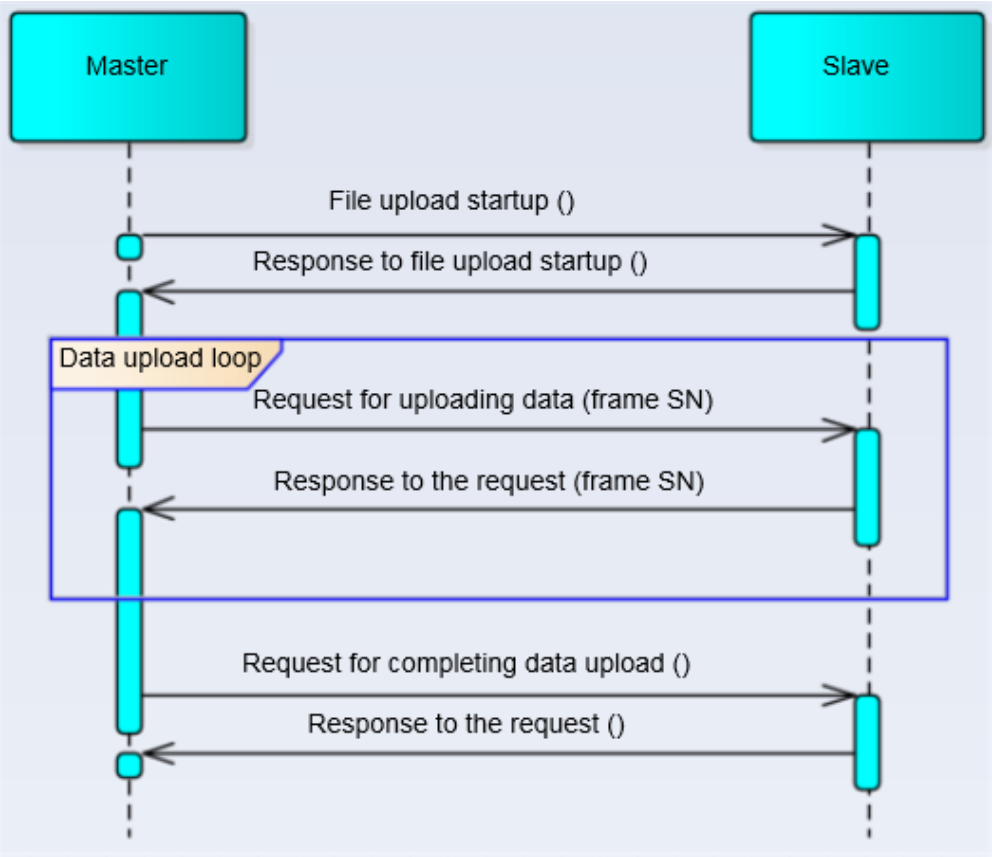

7.3.7.1.1 Starting the Upload

Frame format of a request from a master node

Table 7-15 PDU data field of the request frame for starting upload (0x05)

PDU Data Field	Length (Byte)	Description
Function code	1	0x41
Sub-function code	1	0x05
Data length	1	1 + N
File type	1	Unique ID of a file
Customized data	N	-

Table 7-16 PDU data field of the response frame for starting upload (0x05)

Data Field	Length (Byte)	Description
Function code	1	0x41
Sub-function code	1	0x05
Data length	1	6 + N
File type	1	Unique ID of a file
File length	4	-
Data frame length	1	-
Customized data	N	-

Table 7-17 PDU data field in the abnormal response frame of the slave node

PDU Data Field	Length (Byte)	Description
Error code	1	0xC1
Exception code	1	See 7.3.2 Exception Code List .

If the exception code is 0x06, resend the request after 10 seconds. A request can be resent for no more than six times.

7.3.7.1.2 Uploading Data

Table 7-18 Request frame for uploading data (0x06)

PDU Data Field	Length (Byte)	Description
Function code	1	0x41
Sub-function code	1	0x06
Data length	1	3

PDU Data Field	Length (Byte)	Description
File type	1	Unique ID of a file
Frame No.	2	0x0000–0xFFFF

Table 7-19 Response frame for uploading data (0x06)

PDU Data Field	Length (Byte)	Description
Function code	1	0x41
Sub-function code	1	0x06
Data length	1	3 + N
File type	1	-
Frame No.	2	0x0000–0xFFFF
Frame data	N	-

Table 7-20 Abnormal response frame for uploading data

PDU Data Field	Length (Byte)	Description
Error code	1	0xC1
Exception code	1	See 7.3.2 Exception Code List .

7.3.7.1.3 Completing the Data Upload

Table 7-21 Request frame for completing the data upload

PDU Data Field	Length (Byte)	Description
Function code	1	0x41
Sub-function code	1	0x0c
Data length	1	1
File type	1	-

Table 7-22 Response frame for completing the data upload

PDU Data Field	Length (Byte)	Description
Function code	1	0x41
Sub-function code	1	0x0c
Data length	1	3
File type	1	-
File CRC	2	-

Table 7-23 Abnormal response frame for completing the data upload

Data Field	Length (Byte)	Description
Error code	1	0xC1
Exception code	1	See 7.3.2 Exception Code List .

7.3.7.1.4 Timeout Processing

Table 7-24 Processing specifications of sub-process timeout

Name	Restrains
Response timeout period for starting an upload	10s
Response timeout period for uploading data	10s
Number of times of resending a data upload command	6
Response timeout period for completing a data upload	10s

8 Reference Document

《 Modbus_Application_Protocol_V1_1b3 》

《 Modbus over serial line specification and implementation guide V1.02 》

《 Modbus_Messaging_Implementation_Guide_V1_0b 》